La Boite concept

LX Turntable User manual

Assembling and operating instructions

Table of contents

1 - Your LX speaker **p.4**

Boxes contents p.4

2 - Safety information **p.5**

3 - La Boite concept limited warranty **p.13**

4 - General description **p.17**

5 - LX Turntable opening and assembly **p.22**

1 - Boxes contents p.23

2 - Assembling your LX Turntable p.24

6 - Quickstart **p.35**

1 - Ideal positionning of the LX in your room p.35

2 - Turning the power ON / OFF p.37

3 - Choosing your source p.39

4 - Volume and bass settings p.40

5 - Turntable use p.41

6 - Orientation of the cartridge p.42

7 - Using your LX with your devices p.43

1 - Bluetooth® connection p.44

2 - USB plug p.45

3 - Charging through the IEC power socket p.46

4 - USB charger p.46

5 - Cable connection p.47

6 - Wi-Fi Connection - ESCAPE Streamer p.49

1. Connection via 3.5mm auxiliary jack p.49

2. Connection via Optical p.50

8 - What to do ? p.51

1 - To clean your LX p.51

2 - No power p.51

3 - No sound p.52

4 - The sound is distorted or buzzes p.52


5 - Background noise and undersirable interferences p.52


6 - Thermal protection of the power p.52


7 - Bluetooth® issues p.53


9 - Technical summary p.54

1-Your LX speaker

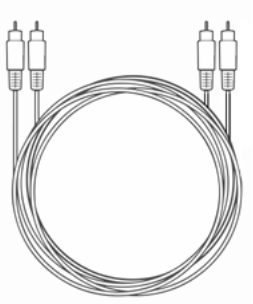

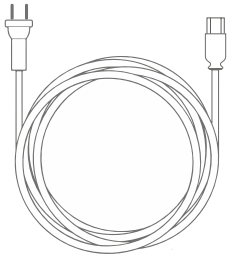

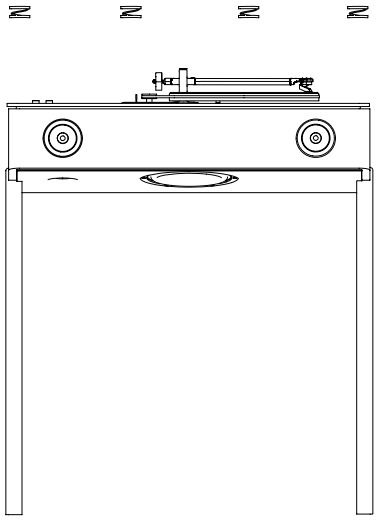

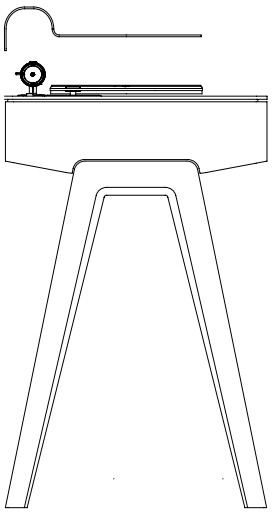

- IEC-type power cord
- Double-ended cable with audio device (RCA plug and 3.5mm stereo plug)
- RCA cable + ground wire
- Turntable power supply
- User manual and Warranty card
- IEC adaptor
- 1 box with LX speaker on his legs
- 1 box with the Pro-ject® turntable on his blotter and the shelf

---

2-Safety information

1. Read these instructions

2. Keep these instructions

3. Heed all warnings

4. Follow all instructions

5. Do not use this apparatus near water

6. Clean only with a dry cloth

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers that produces heat

9. Respect the safety principal of the biased plug or an earth type plug. A biased plug is equipped with two pins, one larger than the other. An earth type plug has two pins and a third of the earth type. The large pin or the third pin are provided for your safety. If the provided pin is not adapted to your electrical wall power socket, call an electrician to replace the obsolete electrical wall power socket.

10. Protect the power-supply cord from being stepped on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.

11. Only use attachments / accessories specified by the manufacturer.

12.Use the LX only in its original base.

13. Unplug this apparatus during lightning storms or when unused for long period of time.

14. Have all maintenance work done by qualified, specialized personnel. Repairs are

required when the device has been damaged : power cord or plug damaged ; liquid spilled on the device or if an object has fallen on it ; if it rains on the device or if it is wet or damp ; if the device not normally operating ; or is the device has fallen.

Warnings

To reduce the risk of fire or electrical discharge, do not expose the unit to rain or wet sources. The unit is class 1 classified, and it must be connected to the electrical wall power socket with an earth plug.
The unit must be installed so that it can be removed from the electrical network by means of the earth plug (or with an adapted connector located on the rear side of the unit).
If the power plug is used as a disconnection device, the unit must be available and easy to use. Only use the power cords supplied with the unit. We recommend not to place in a confined space. Do not place the unit on a rug, or on a smooth surface, and do not obstruct the air holes, the amplifier's radiator (blades), or the output screens.
The unit must not be used nearby water ; it must not be exposed to an evacuation source, or to splashing, or to any other types of liquids. No object filled with water such as vases, should be placed on the unit.

Warnings disclaimer

The assembly of the LX is a very important step for the correct use of the product. The end user should carefully read the assembly guidelines before setting up the product or consult a brand representative in case of any question. CCLAB La Boite concept and its distributors cannot be held responsible in case of the product falling due to a mounting that did not follow these guidelines.

⚠ Attention

The purpose of the exclamation point in equilateral triangle is to inform the user of the presence of important instructions in this manual about how to operate the device and maintenance operations.

DEEE Symbol

The separate recycling of electrical and electronic devices. This product contains electrical and electronic equipments which can be reused, recycled or recovered, and therefore must not be discarded in your usual trash, which is not selectively sorted. Please return the unit or contact the authorized dealer who supplied you the product for more information.

Normes FCC

The LX speaker in an acoustic speaker which integrates a power amplifier.

⚠ Dangerous voltage

The luminous indicator with the “arch in an equilateral triangle” symbol is intended to warn the user of the presence of a “dangerous current” not insulated in the product, and this current could be strong enough to cause an electric discharge on people.

CE Mark

This product in conformed to the European directives related to low voltage (2006/95/EC) and electromagnetic compatibility (89/336/EEC) when the unit is installed and used accordingly to the users manual instructions. To guarantee extended conformity, only La Boite Concept accessories should be used with this product and the maintenance operations must be conferred to qualified and specialized personnel.

Important

The manufacturer disclaims any responsibilities for radio or audiovisual interferences generated by unauthorised changes made on this device. Such changes could would void the maufacturer warrant and cancel the authorization of utilisazation by the user.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment was created and tested in conformity with the limits of class B digital devices in accordance to FCC rules. These limits were defined to provide a reasonable protection against dangerous interferences inside a residential installation. The equipment generates, uses and may emits radio frequency radiation if it is not installed or used in conformity with the instructions, and this may cause dangerous interference for radio communications.

If this device generates interferences which disturbs the reception of radio or television emissions, which may be noted by activating or deactivating the device, we propose to the user to try to remedy such interferences in one of the following ways :
- Reorient or move the reception antenna
- Increase the distance between the equipment and the radio television set
- Connect the device to a wall power socket of another circuit than that one used for the radio or the TV
- Contact the dealer or an experienced TV/radio technician for assistance.

The equipments recommended by La Boite concept complies with FCC exposure guidelines and are approved as part of an uncontrolled environment. These equipments have been designed so that are installed and used from a minimum distance of 20 cm between the transmitter equipment and the user(s).

FCC : Caution

Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Aeration / Important

The unit may heat when used. Never operate the central part without its side bases. Do not place the equipment in a completely closed room or in a compartment insufficiently ventilated. Make sure that no small object can pass through the LX. If it happens, immediately switch off the device, disconnect it from the wall power socket and contact your dealer for assistance and advice.

Location

Carefully select a spot for installing your equipment. Avoid placing it directly in sunlight or nearby a heat source. No fire source such as candles shall be placed on the device. Also, avoid any source which could cause vibration, dust, coolness or moisture. The device can be used at average temperatures. The unit must be installed on the two (2) LX provided legs. Do not operate the central part without its sides bases. Do not install the equipment in a completely closed room or in a set of compartments. Do not place the unit on an unstable surface or on a shelf. Make sure that the furniture inserts have been correctly fastened. If not, the unit could fall and injury a child or an adult, and damage the product as well. Due to the disturbed magnetic fields, no record player or CRT television set must be placed nearby the device to avoid possible interference.

Power source

The unit should only be used with the type of electric power source compatible indicated in the trapdoor storage space. If you are not sure about the power source rating in your place, please contact your dealer or the company responsible for the electric power installation in your area. The unit was designed to be left in Stand-by mode when not in use ; this wall allow increasing the amplifier's life (this is true for all electrical devices). To switch off the unit, press the ON/OFF button on the rear of the device (metal plate located under the central unit). If you do not intend to use the unit for a long period, simply unplug it from the wall power socket.

Overload

Avoid overloading the wall-mounted electrical installations or the extension cords because this could cause a fire or an electrical discharge. Overloaded DC installations, extension cords, damaged power cables, a damaged or cracked insulation and broken plugs are dangerous. They could cause a discharge or a fire. Make sure that each cables are correctly inserted. To avoid humming or background noise, do not mix interconnections with the power cord or loudspeakers cables.

Nettoyage

In order to clean the unit, wipe it with a dry, lint-free cloth. Do not use liquid cleaning products containing alcohol, ammonia or abrasives. Do not use a spray on and nearby the unit.

Réparations

These units should not be repaired by the user. Do not try to repair, dismount or un-assemble the unit if a problem occurs. A strong electric discharge could take place if this precautionary measures are not respected. In case of a problem or failure, please contact your dealer.

3-La Boite concept limited warranty

This product was designed and manufactured in accordance with the most rigorous quality standards. However, in case of a problem, La Boite concept, and their national distributors, guarantee labour (exclusions possible) and spare parts free in all countries served by a La Boite concept approved distributor.

This limited warranty is valid for a two years period from the date of purchase unless exclusions are applicable in some countries according to the national legislation. Contact La Boite concept's distributor in your country for more information. Please make sure to subscribe to the warranty on La Boite concept website.

1. The warranty is limited to the repair of the equipment. Transport or other costs, and risks associated with the pickup, transport and installation of the products are not covered by this warranty.

2. The warranty is exclusively reserved for the original owner and may not be transferred.

3. During the 2-year limited warranty period, please preserve cartons boxes and protective foams.

4. This warranty is only eligible to products with faulty workmanship and/or defective parts at the moment of purchase and does not apply in the following cases:

a. Deteriorations resulting from an in correct installation, connection or packaging.

b. Deteriorations resulting from an usage other than the correct usage described in the User Manual, negligence, changes or the use of parts not manufactured or approved by La Boite concept.

c. Deteriorations resulting from a defective or unsuitable auxiliary equipment.

d. Deteriorations resulting from : accidents, lightning, water, heat, war, breaches of public order, or other causes outside of the reasonable control La Boite concept or its approved distributors.

e. Products with serial numbers modified, erased, eliminated or rendered unreadable.

f. Products repaired or changed by an unauthorised person.

5. This warranty is an addition to any national / regional legal obligation on behalf of the national distributors or dealers and does not affect your statutory rights as a customer.

6. To claim this warranty please use the original packaging of your LX Turntable.

How to file a claim under the warranty

Please follow the procedure below if you desire to file a claim under the warranty :


1.If the equipment is used in the country where it was purchased, please contact the distributor approved by La Boite concept which sold the equipment.

2. If the equipment is used in a country other than the country where it was purchased, please contact the national La Boite concept distributor of the residence country, which indicates to you where you can have the equipment repaired. If you desire to file a claim from France, please contact La Boite concept in France at laboiteconcept.com to obtain an accurate telephone/email address of your local distributor. To validate, your warranty, you should present the original copy of your sales invoice or another form of proof of your purchase and the date of purchase.


4-General description

Knobs and control panel


Control panel

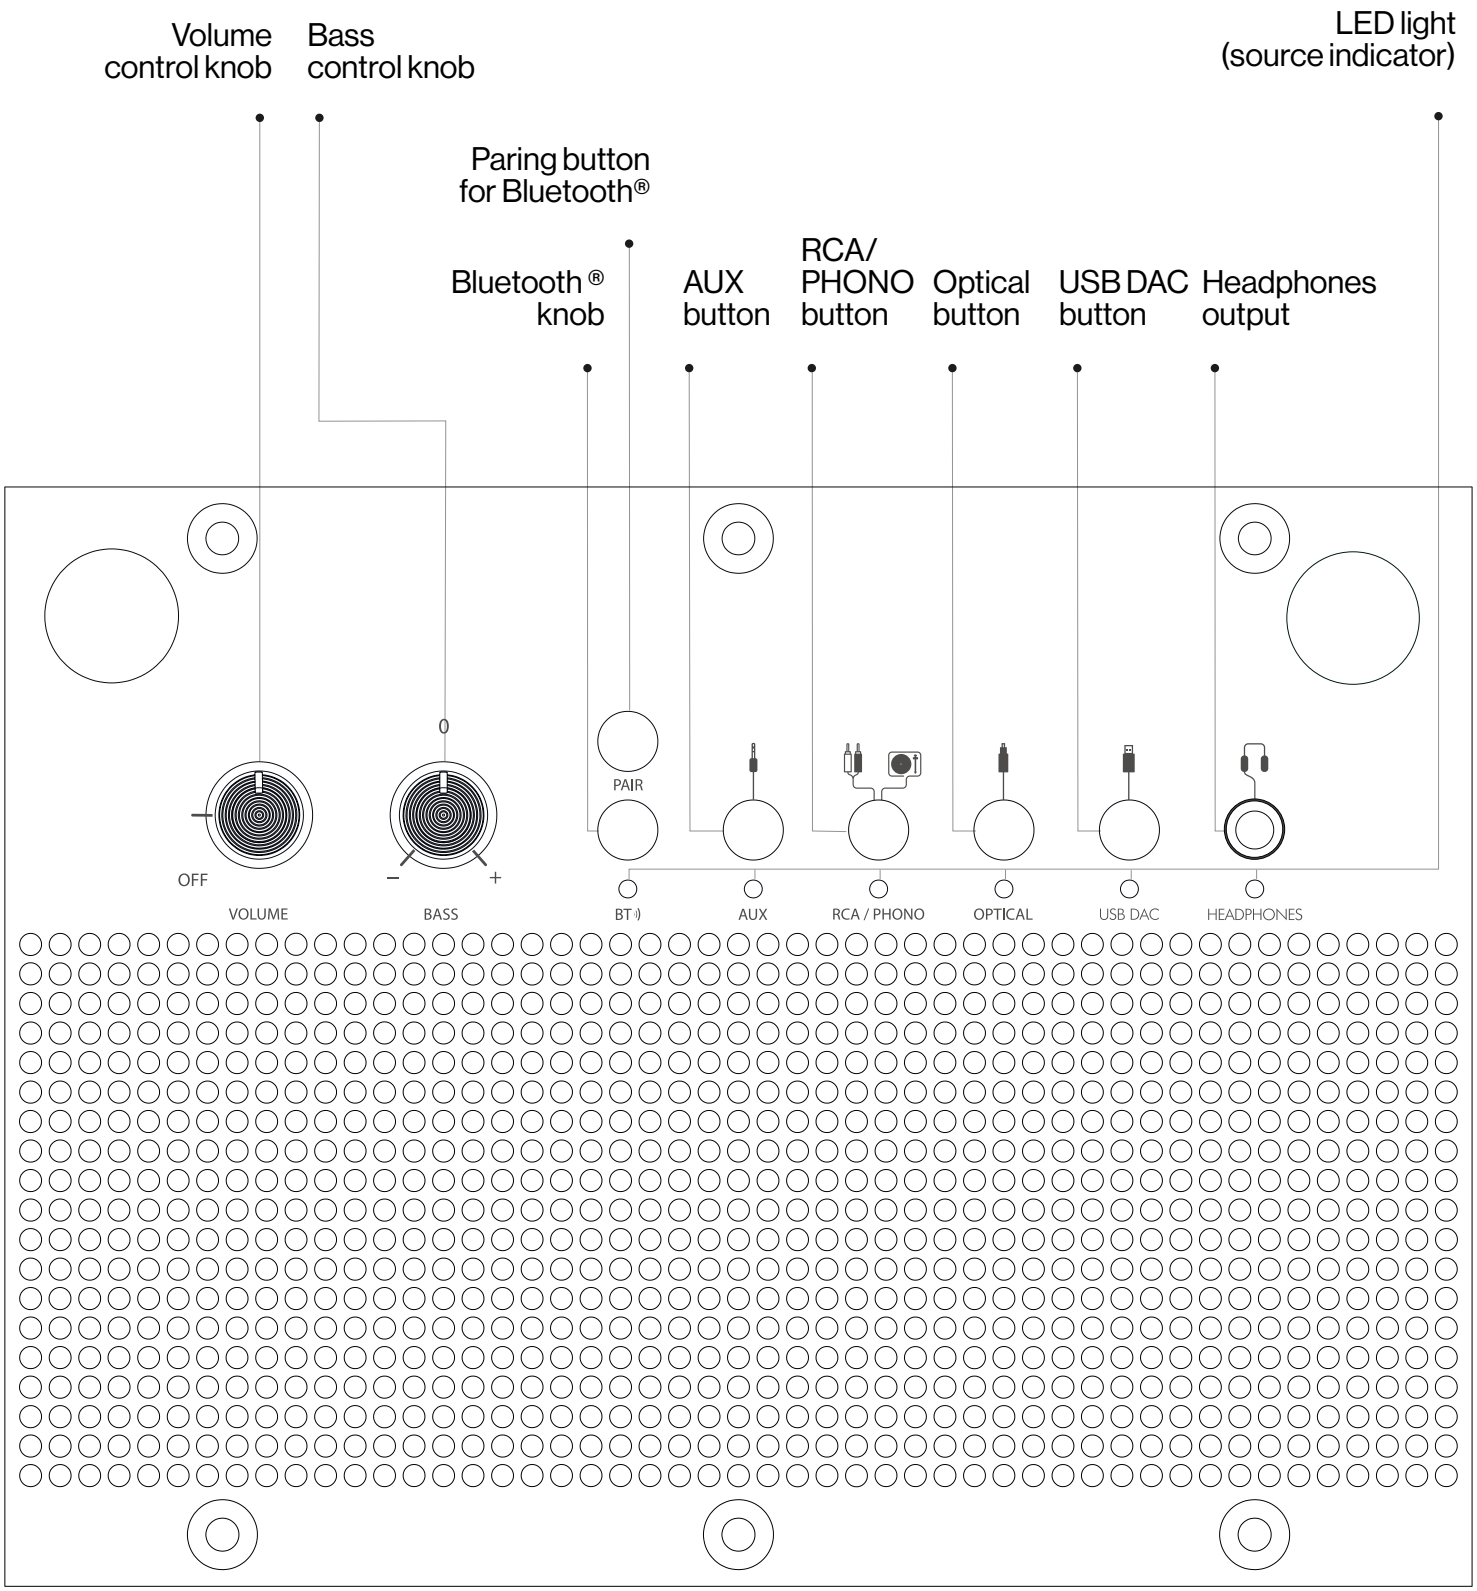


Input panel

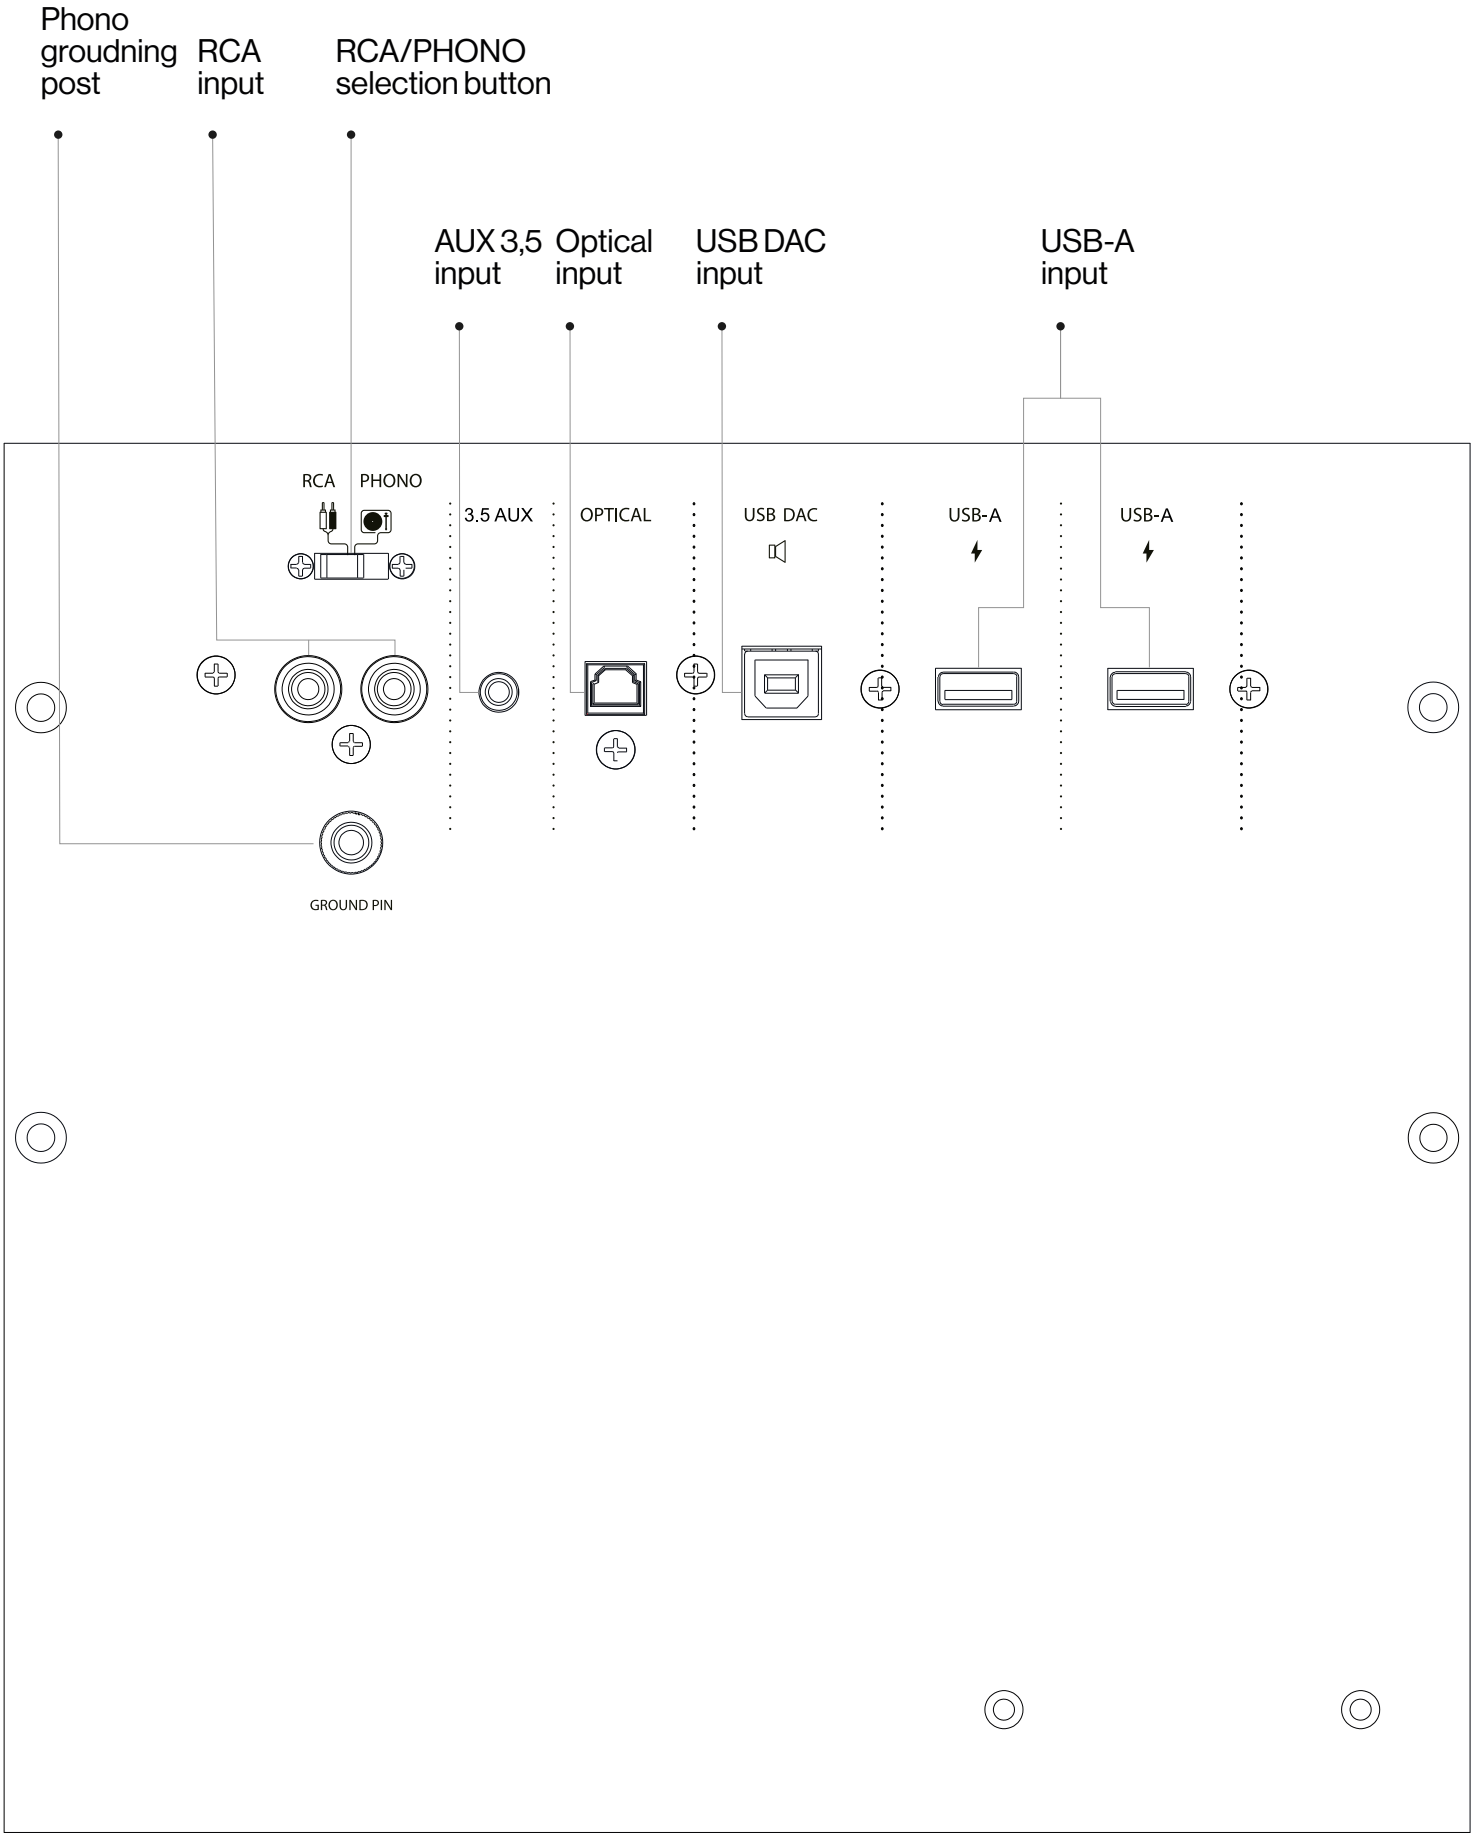
Phono groudning post
RCA input
RCA/PHONO selection button
AUX 3,5 input
Optical input
USB DAC input
USB-A input
RCA
PHONO
3.5 AUX
OPTICAL
USB DAC
USB-A
USB-A
GROUND PIN

Top of your LX Turntable

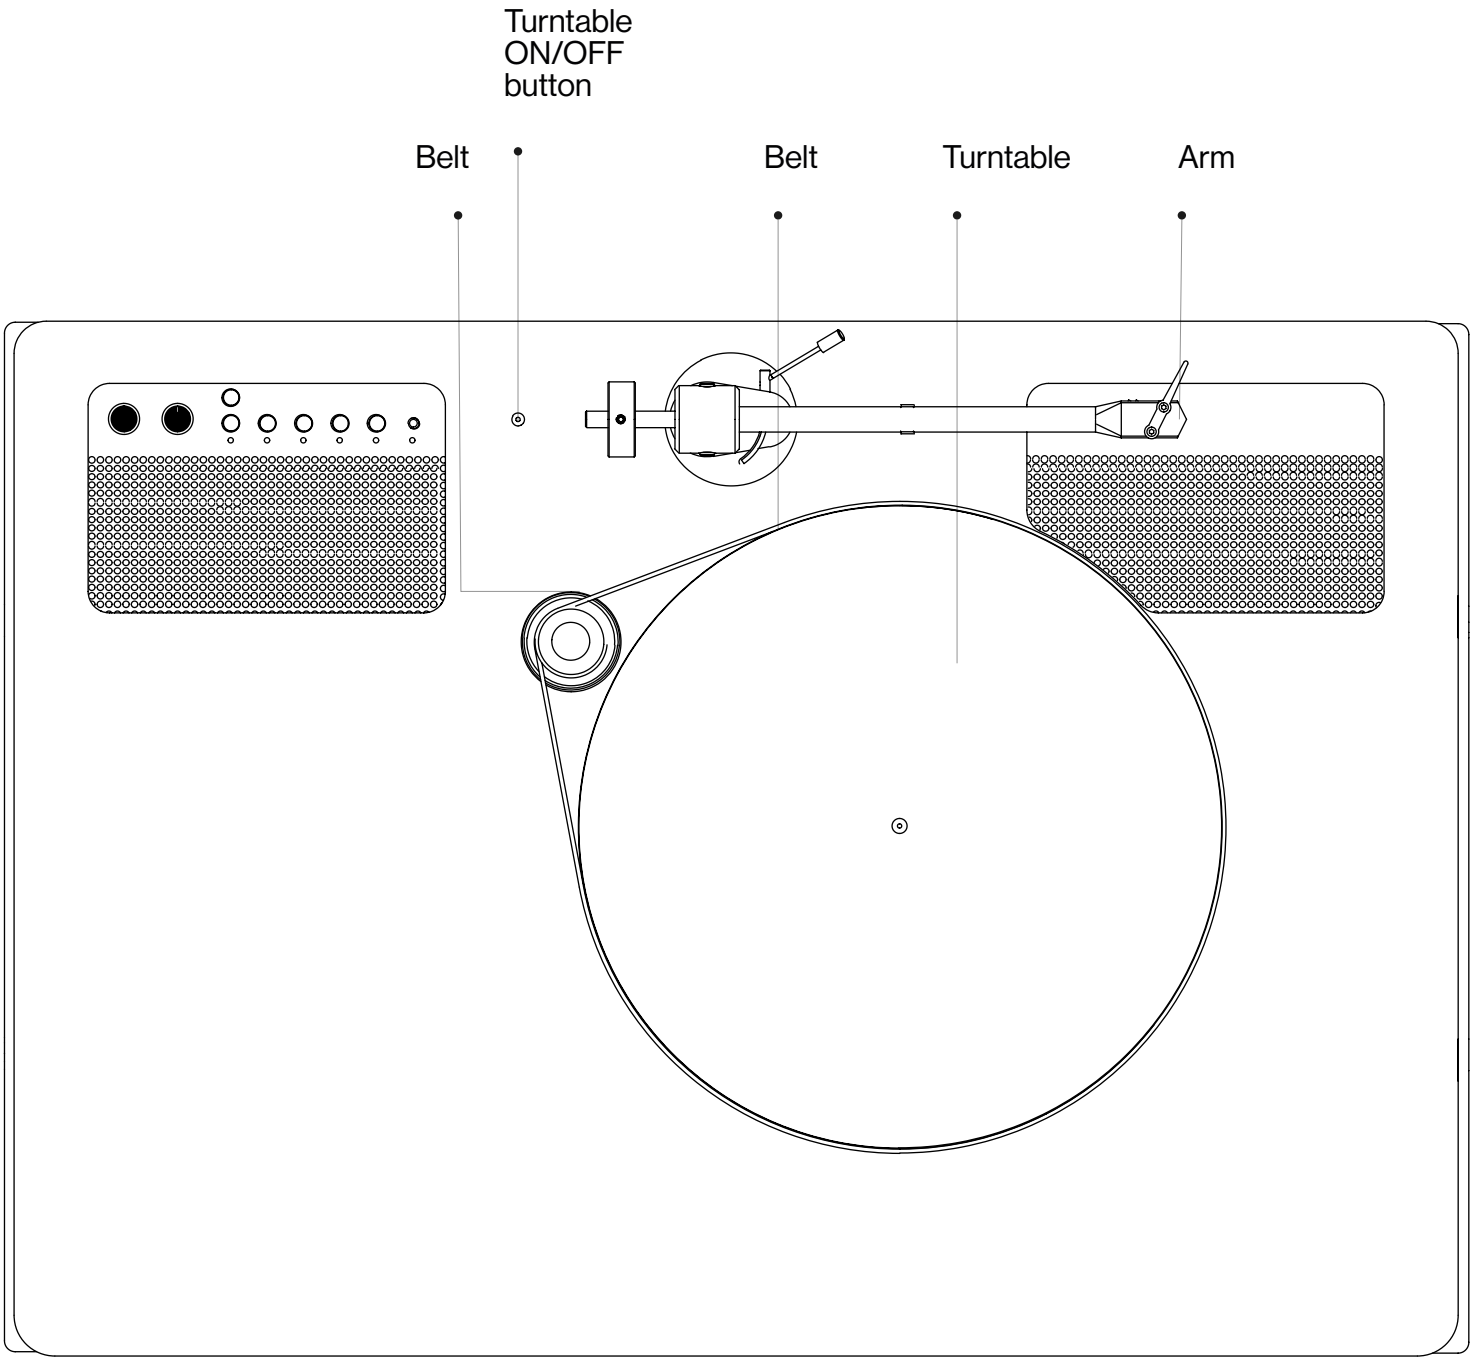

Back of your LX Turntable

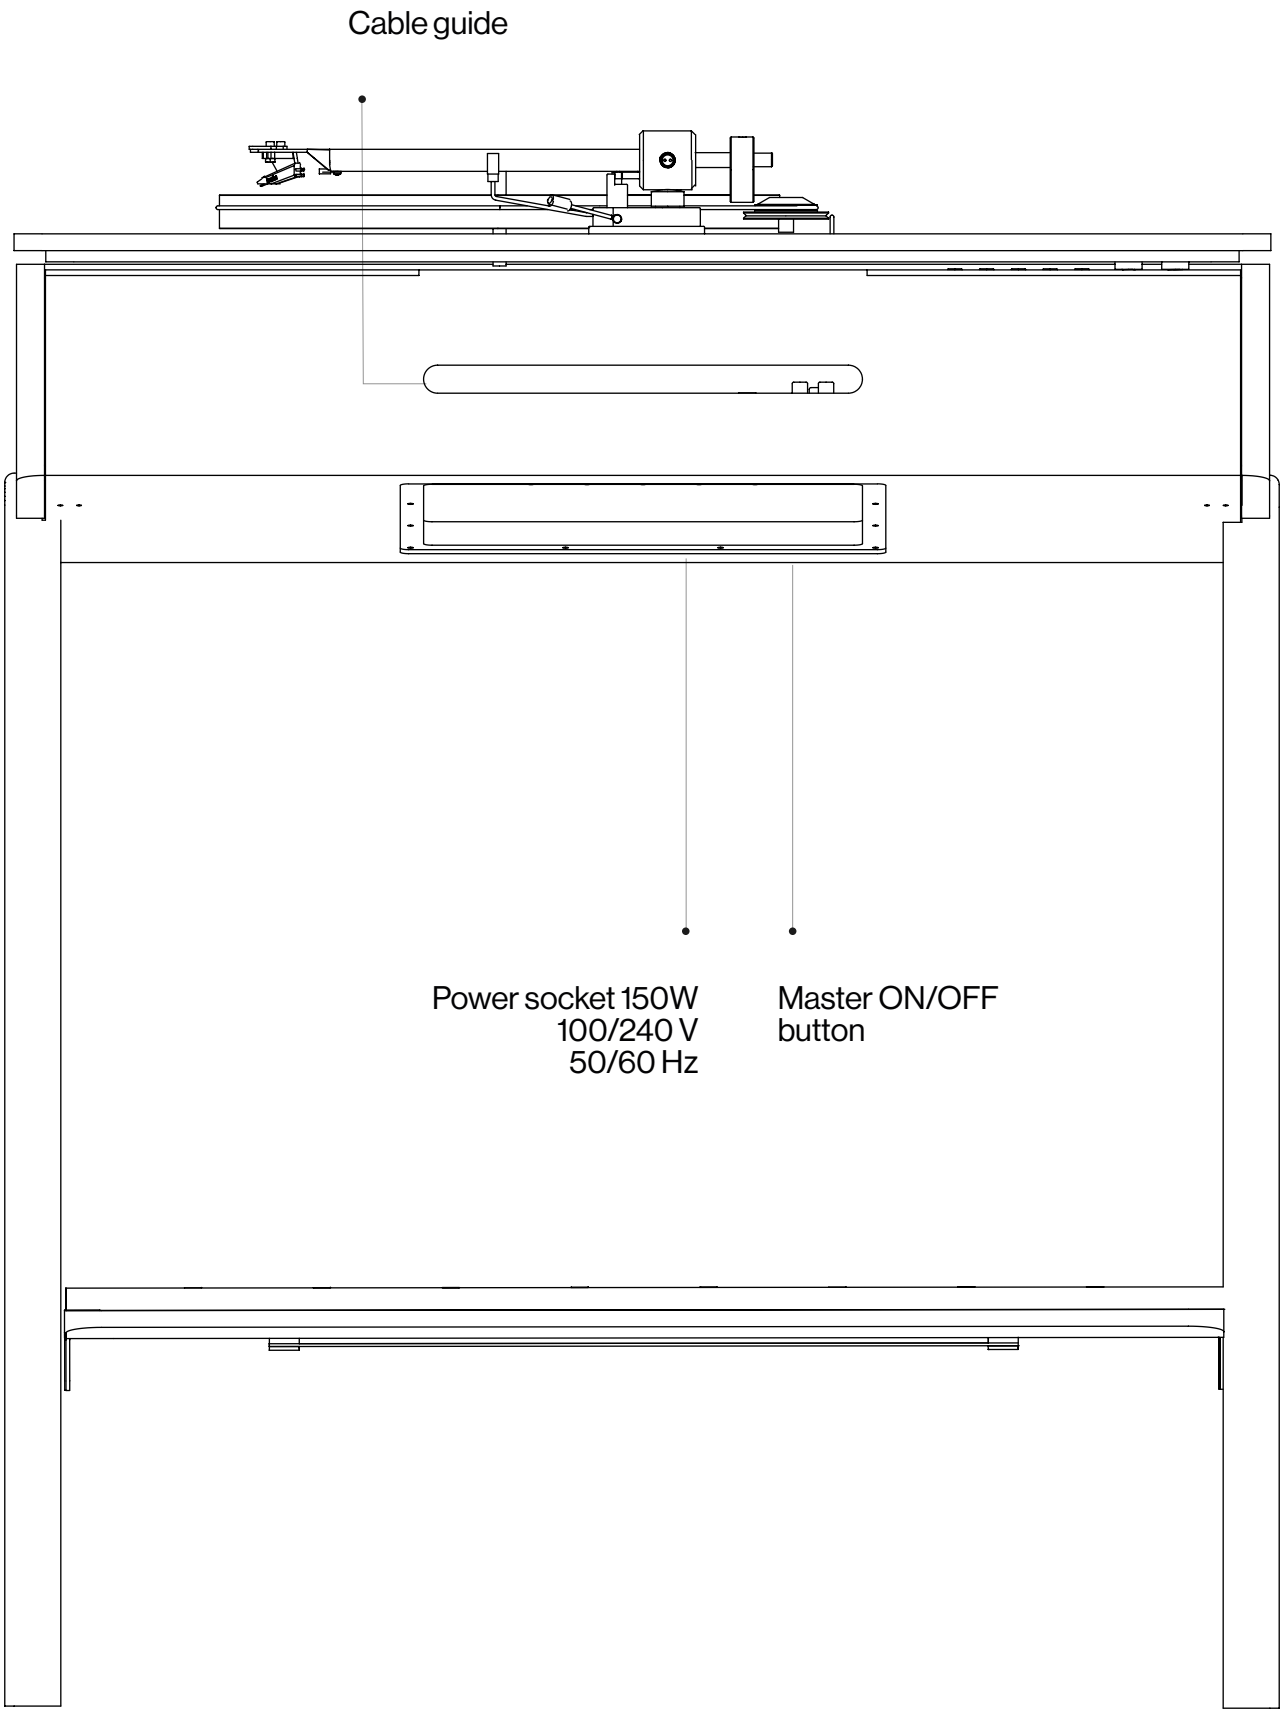

5-LX Turntable opening and assembling

1 - Box content

Don't forget that the LX is heavy; Save the original packaging in case you should have to return the device because the limited warranty does not cover damages due to shipping. La Boite concept's "return within 30 days" policy covers only prodcuts which are returned in their original packaging.**Two boxes** are available. The boxes should contain the following components :

Box 1


- Loudspeaker cabinet carton box
- Protective foam
- Protective cover
- A LX acoustic loudspeaker
- A front cover
- A pair of stands
- Eight flat head screws
- Four rounded head screws
- An allen key 6 pan
- A RCA - mini-jack cable
- A RCA cable + ground wire
- A power source for the speaker
- A power source for the turntable
- A universal adaptator (IEC C14) for the power socket in the trap door

Box 2


- Turntable packaging
- Protective foam
- Protective cover
- A blotter with the turntable fixed on it
- A shelf
- 6 woods stick for vinyl sleeves

2 - Assembling your LX Turntable


Box 1/2

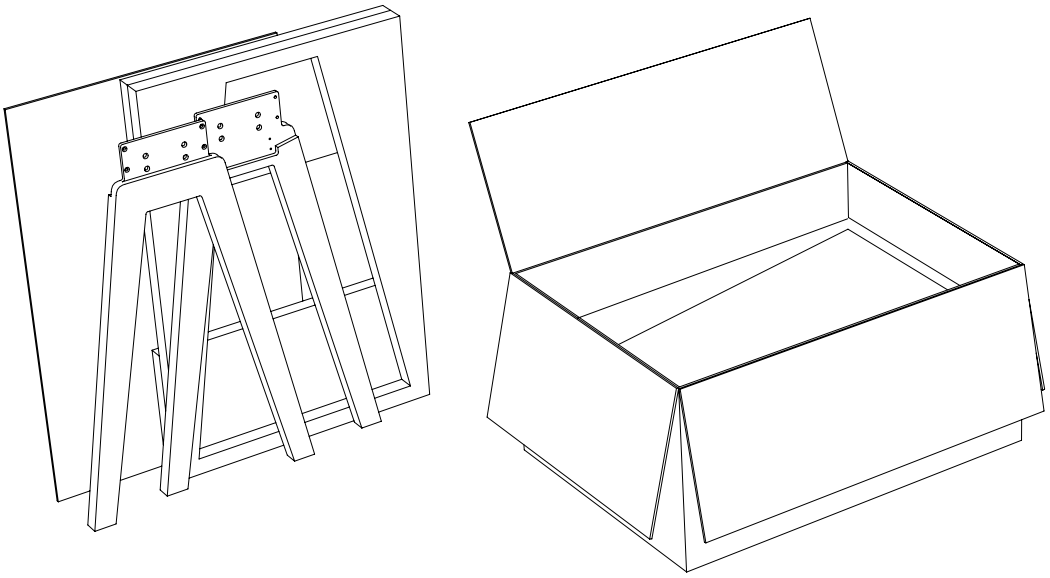


1. Remove the stands and protective foams.

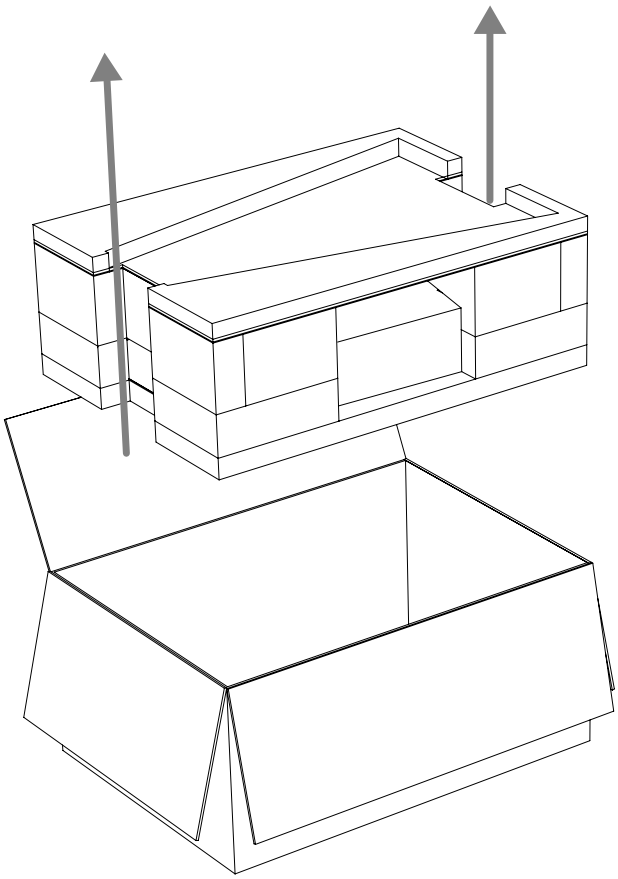

2. With the help of somebody : using the notches on the side of the foam, grab the entire unit and pull it out. Please keep the carton box as well as the original protective foams.

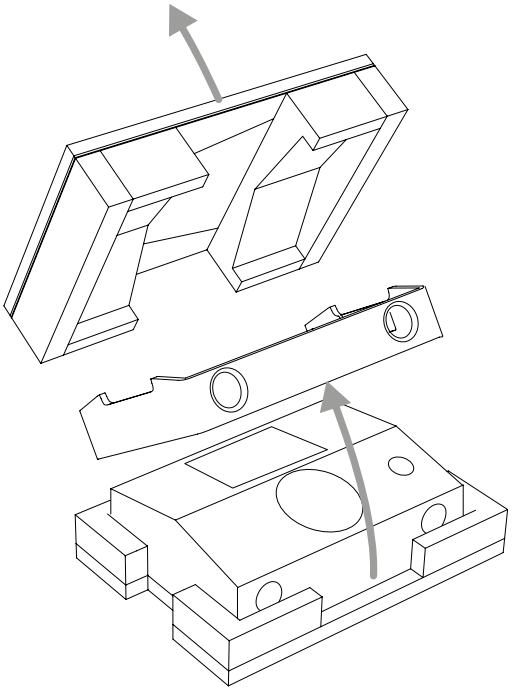



3. Remove the upper protective foam. With the help of somebody, lift the loudspeaker to remove the front cover. Then, replace the loudspeaker back into its protective foam respectively.

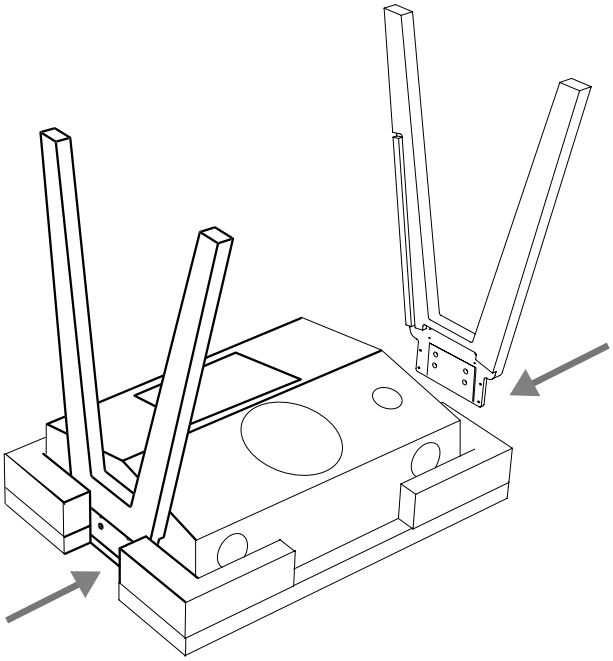


4. Use the “LEFT” and “RIGHT” indications to match the stands and the loudspeaker and screw the stands on the loudspeaker.

Please pay attention to use the right screws on the right place following the stickers provided for the purpose.

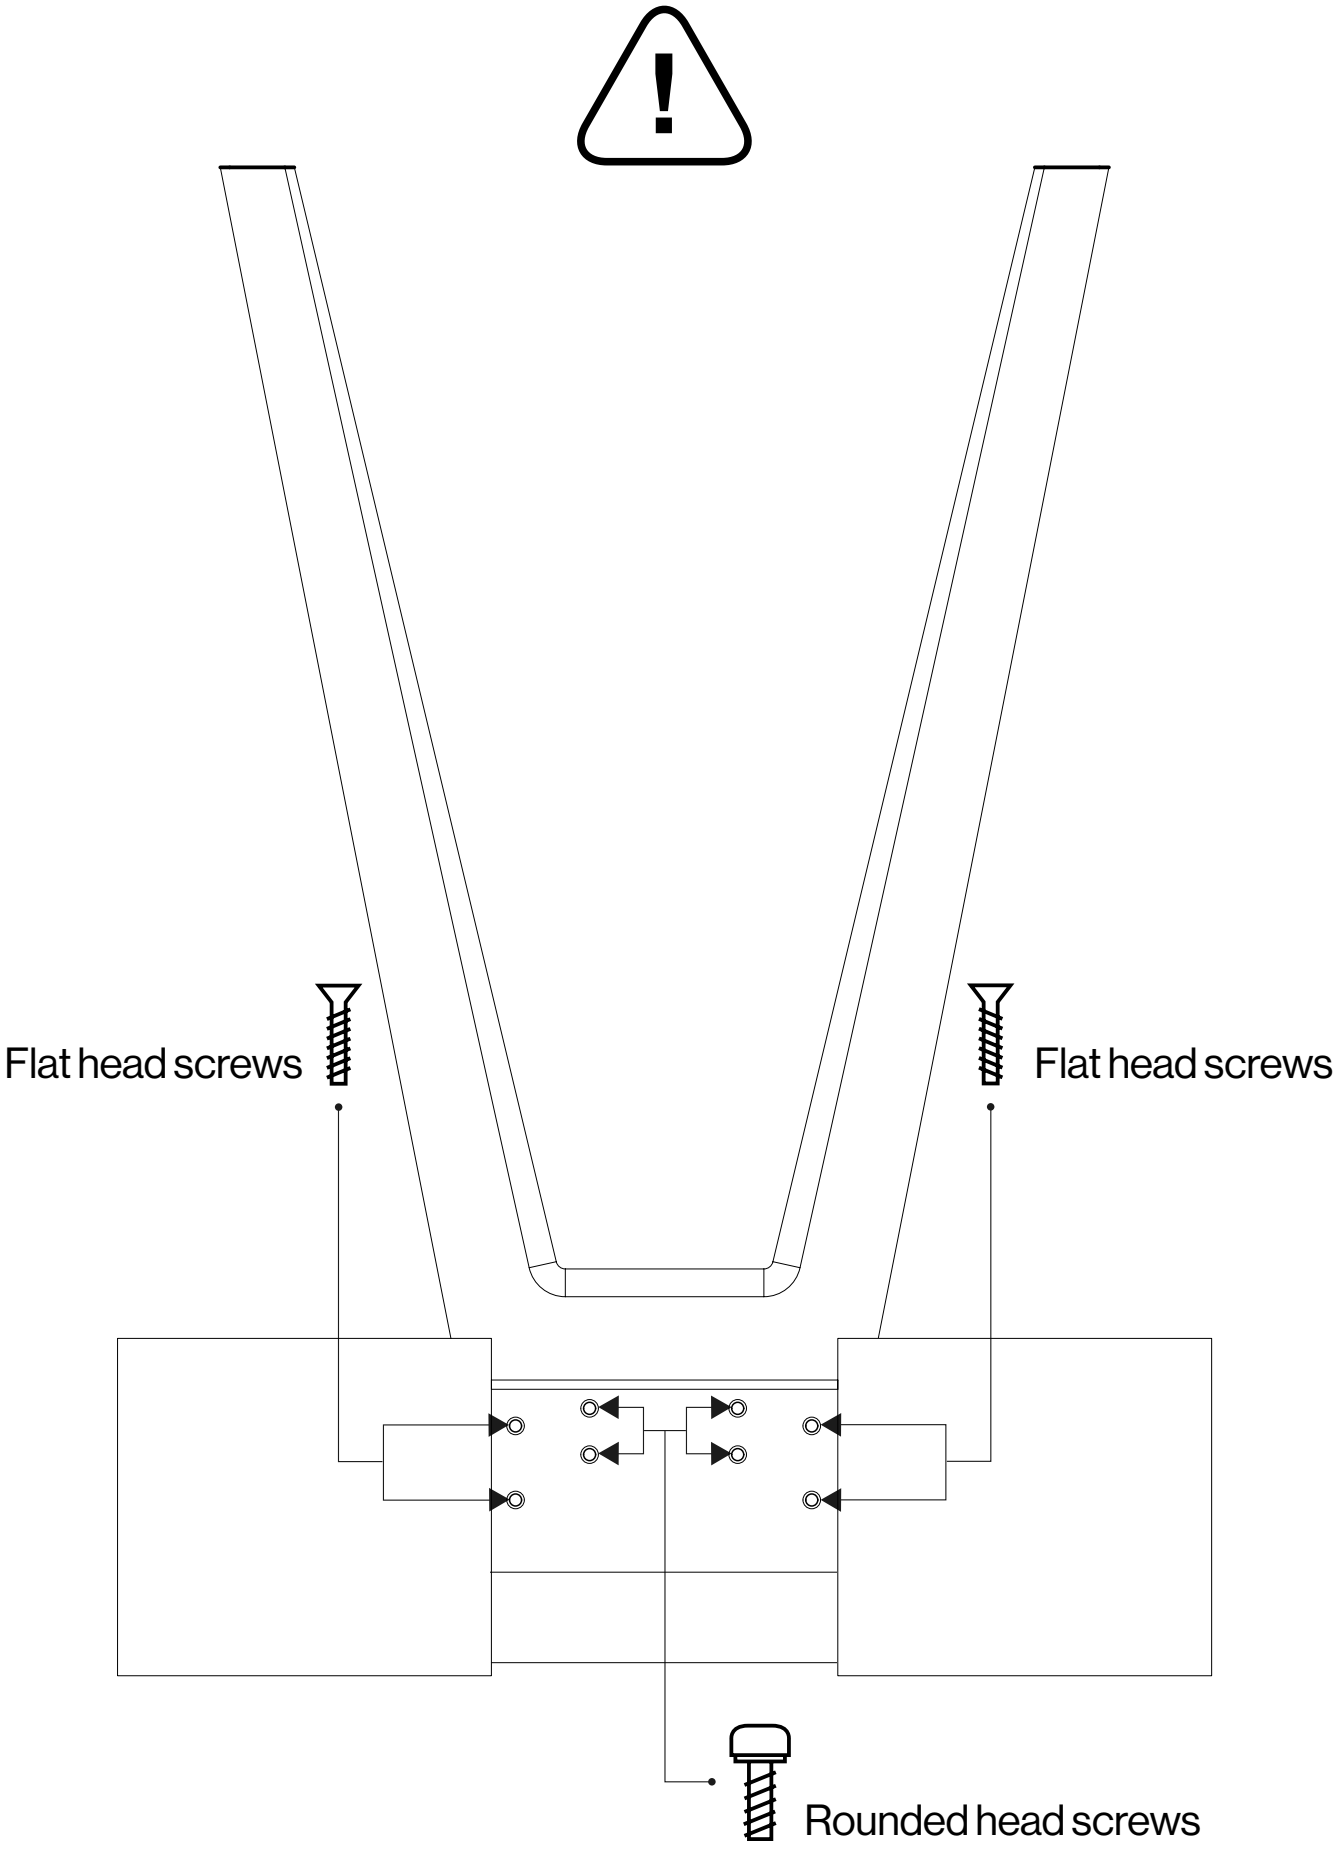
Flat head screws
Flat head screws
Rounded head screws

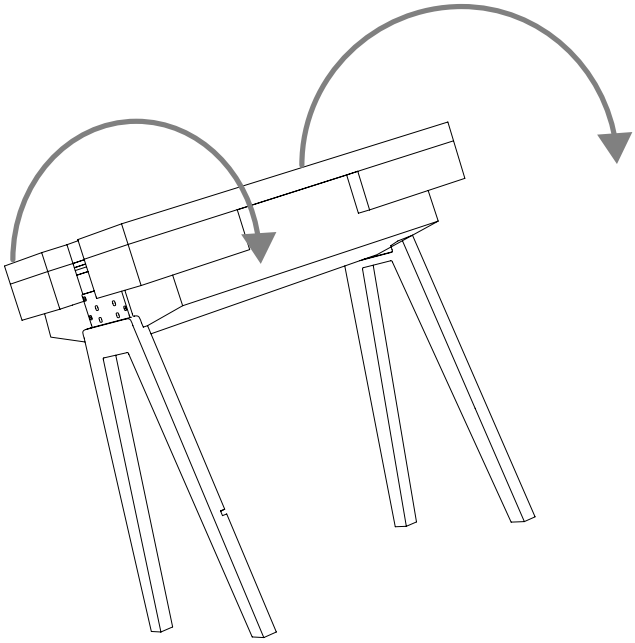


5. With the help of somebody, flip the LX to standing position and remove the protective foam.

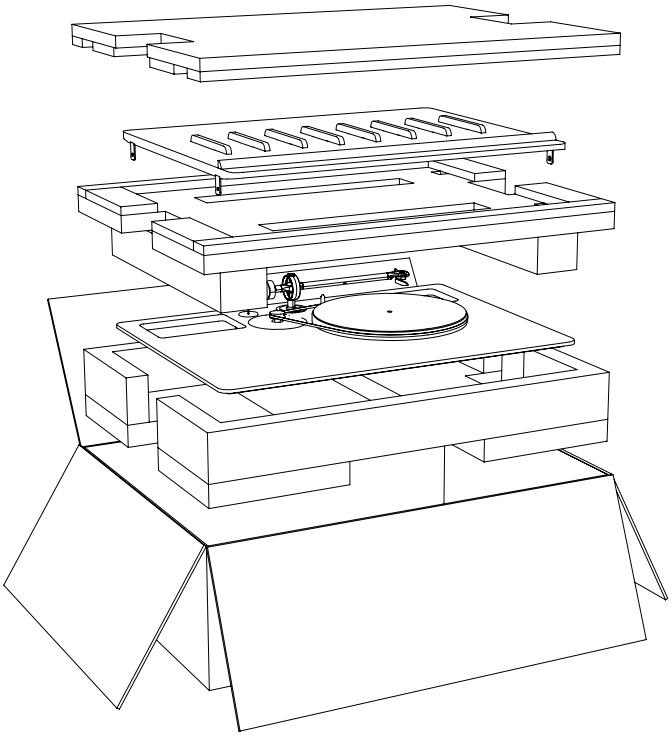


Box 2/2

6. Open the carton box 2/2 containing the turntable and the shelf.


For optimal use, the Pro-ject arm must be preset by your self. Please follow the instructions in the current 2/2 carton.

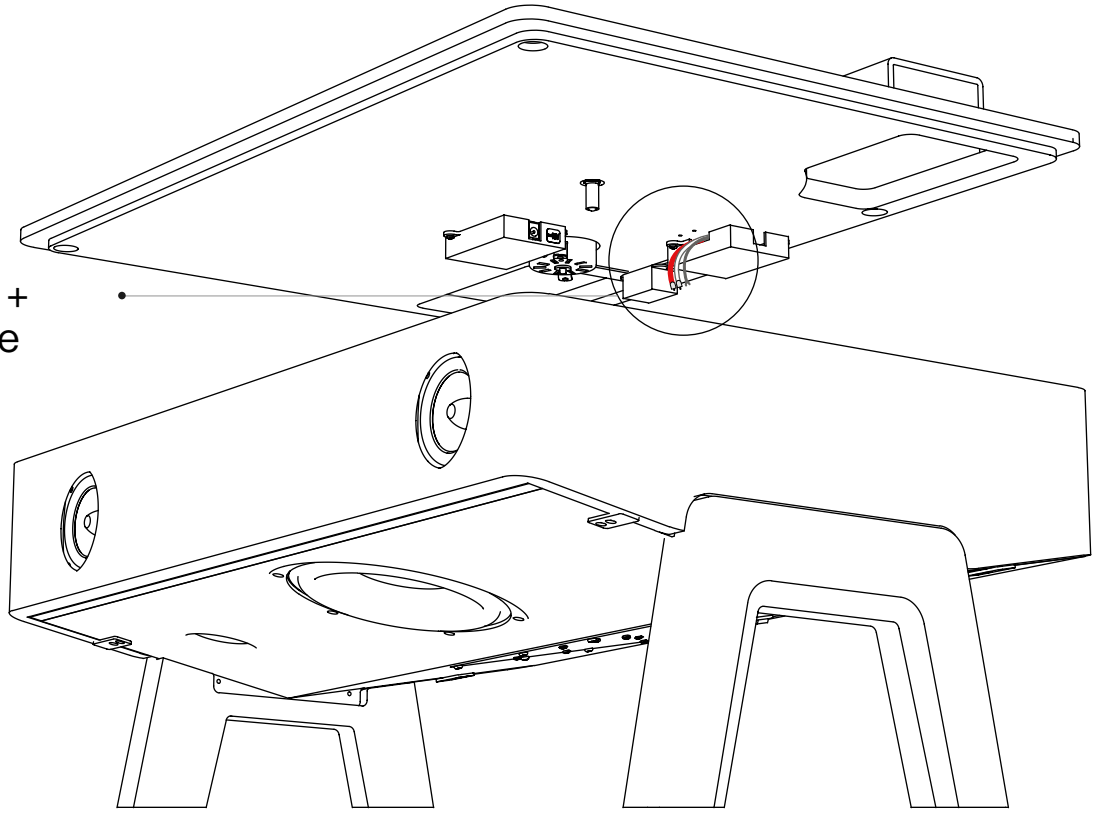

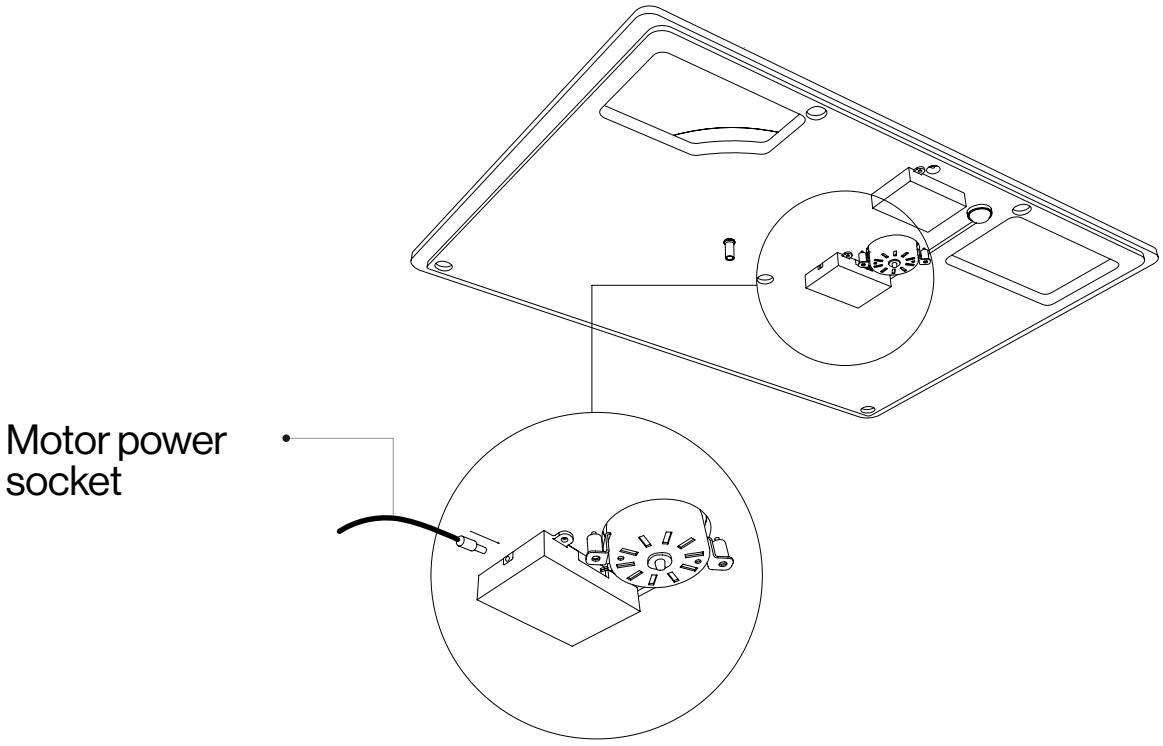

7.1 To connect the turntable to the loudspeaker : On the blotter

1. Plug the RCA cable provided.
2. Connect the turntable's ground wire.
3. Plug the power cord provided.

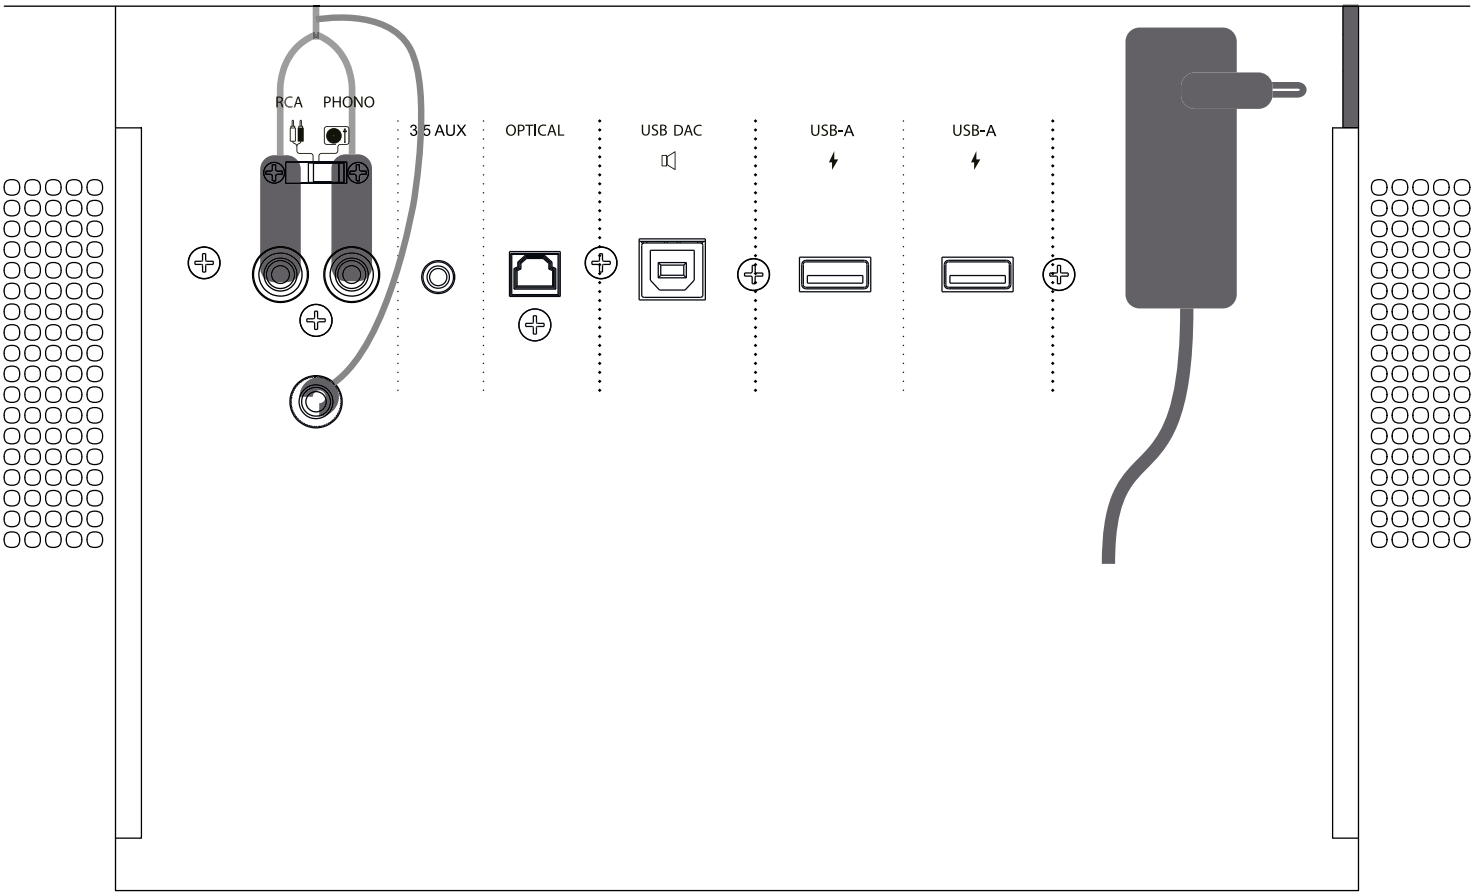


Please make sure to place all cables, as shown below in order to avoid any contact between the loudspeaker and the turntable. The shock absorbers isolate the turntable from any unwanted vibrations and interferences produced by the speakers. For an optimal sound restitution, place the shock absorbers, the cables and the power cord as shown on the drawing below

7.2 To connect the turnta- ble to the loudspeaker :
On the source panel

1. Plug the other end of the RCA cable to the RCA input on the source panelof the loudspeaker.

2. Connect your turntable's ground wire to the ground pin on the source panel of the loudspeaker.

3. Plug in your turntable to the power socket inside the trapdoor with the pow- er cord provided.

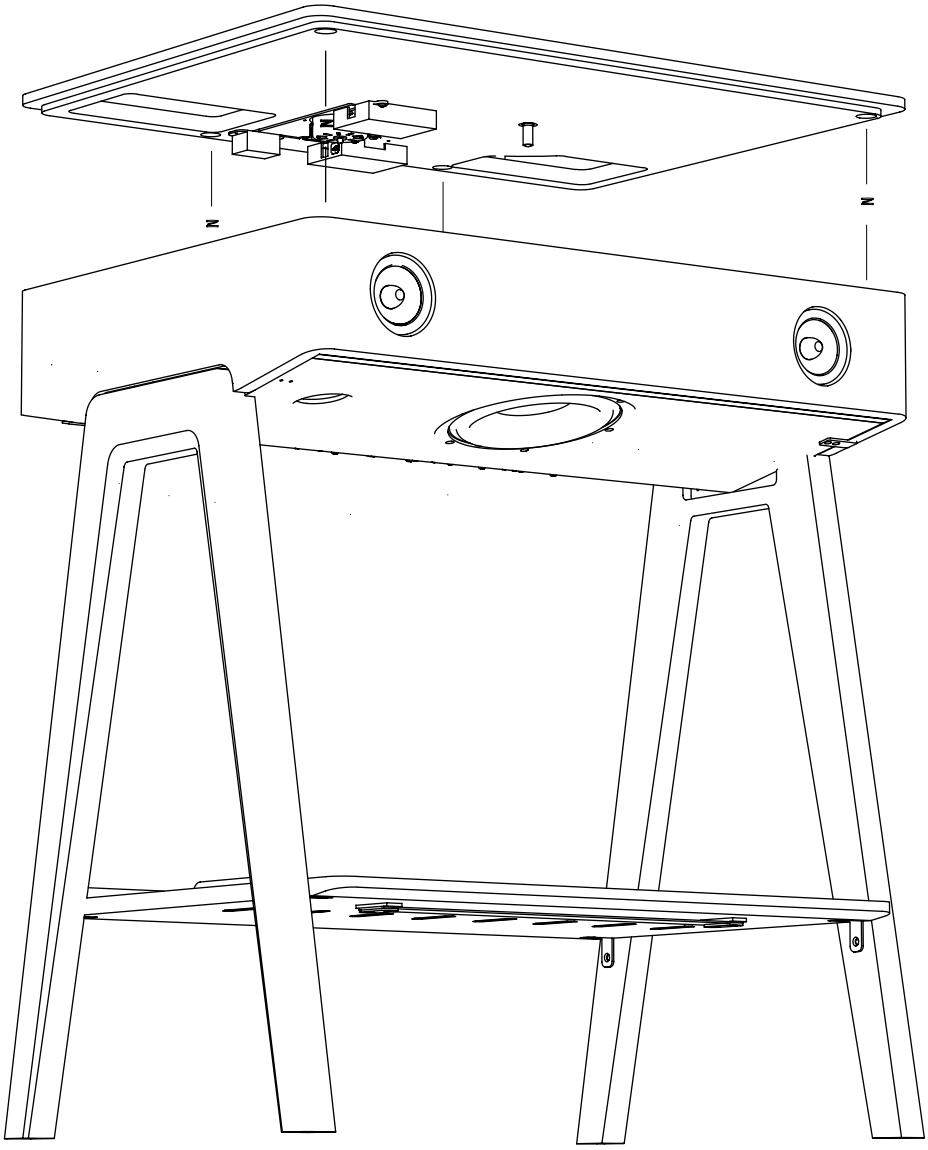

Adjusting the blotter on the loudspeaker


8. Once everything is connected :

Clip the 4 shock absorbers in the groove of the pods provided for this purpose : there are 2 pods per shock absorber.

Then place them in the grooves located on the loudspeaker.

Put the blotter down on the shock absorbers and search for a “click” sound.


Make sure to store cables in the cable hatch.

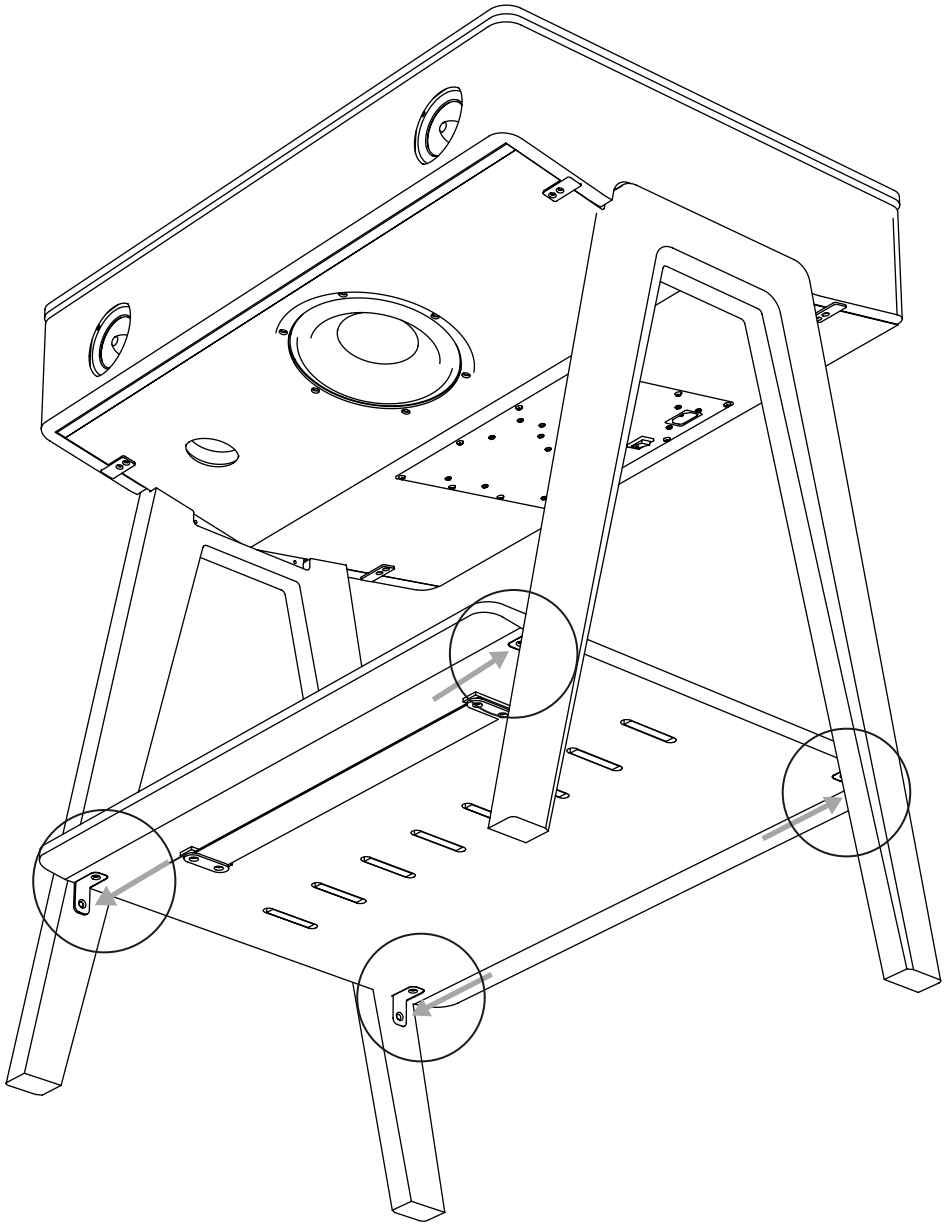


9. The shelf is pre-assembled with L-shaped metal pieces.

Match them with the holes provided for the screws on the stands.

Use the four flat head screws provided.

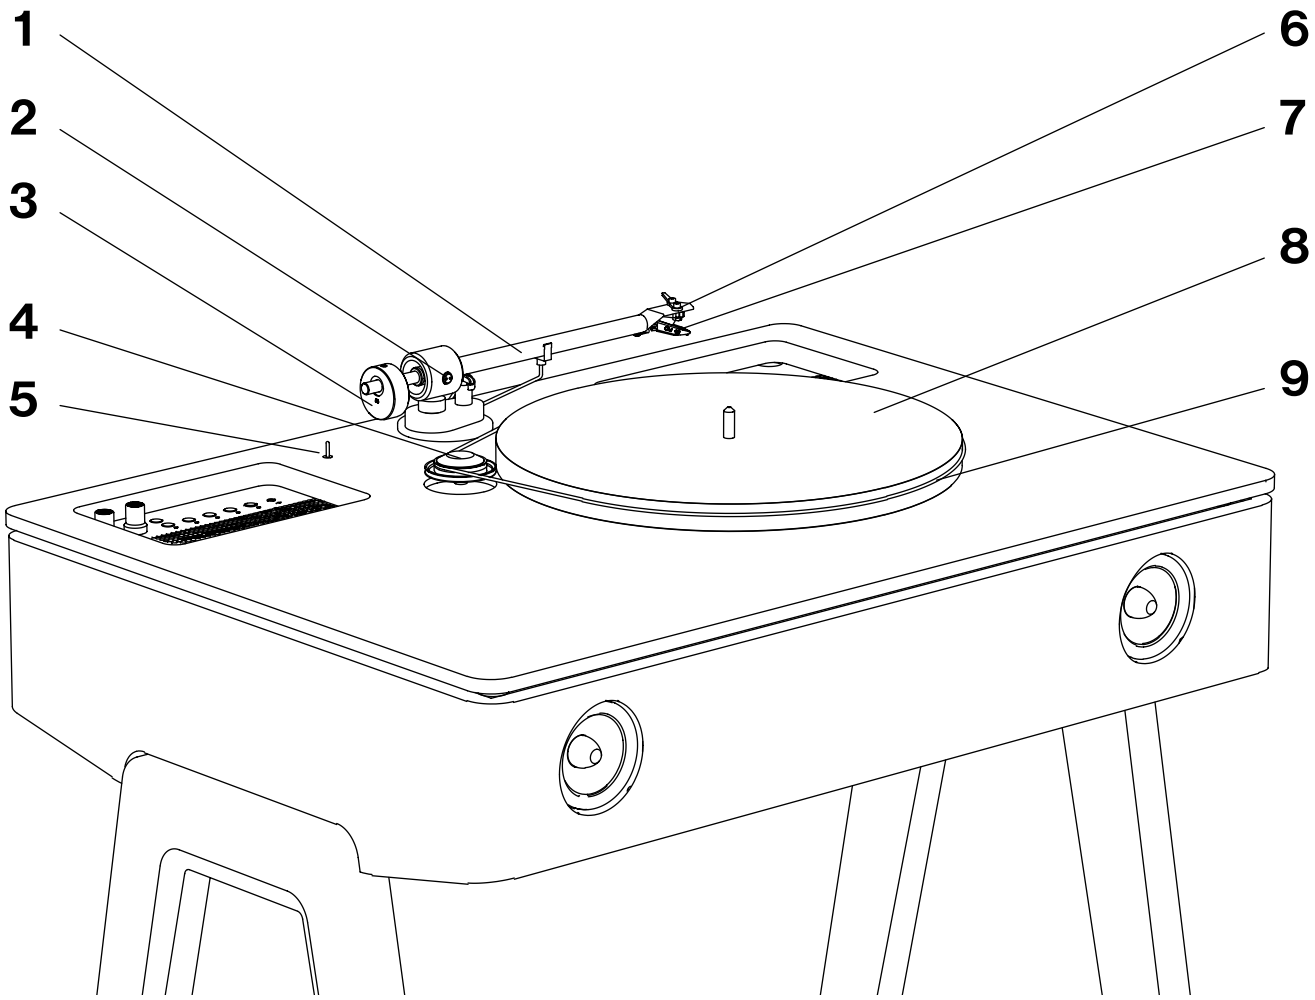

1. Arm
2. Anti-skating trackwell
3. Counterweight
4. Pulley
5. ON/OFF button
6. Cartridge holder
7. Cartridge
8. Felt
9. Belt

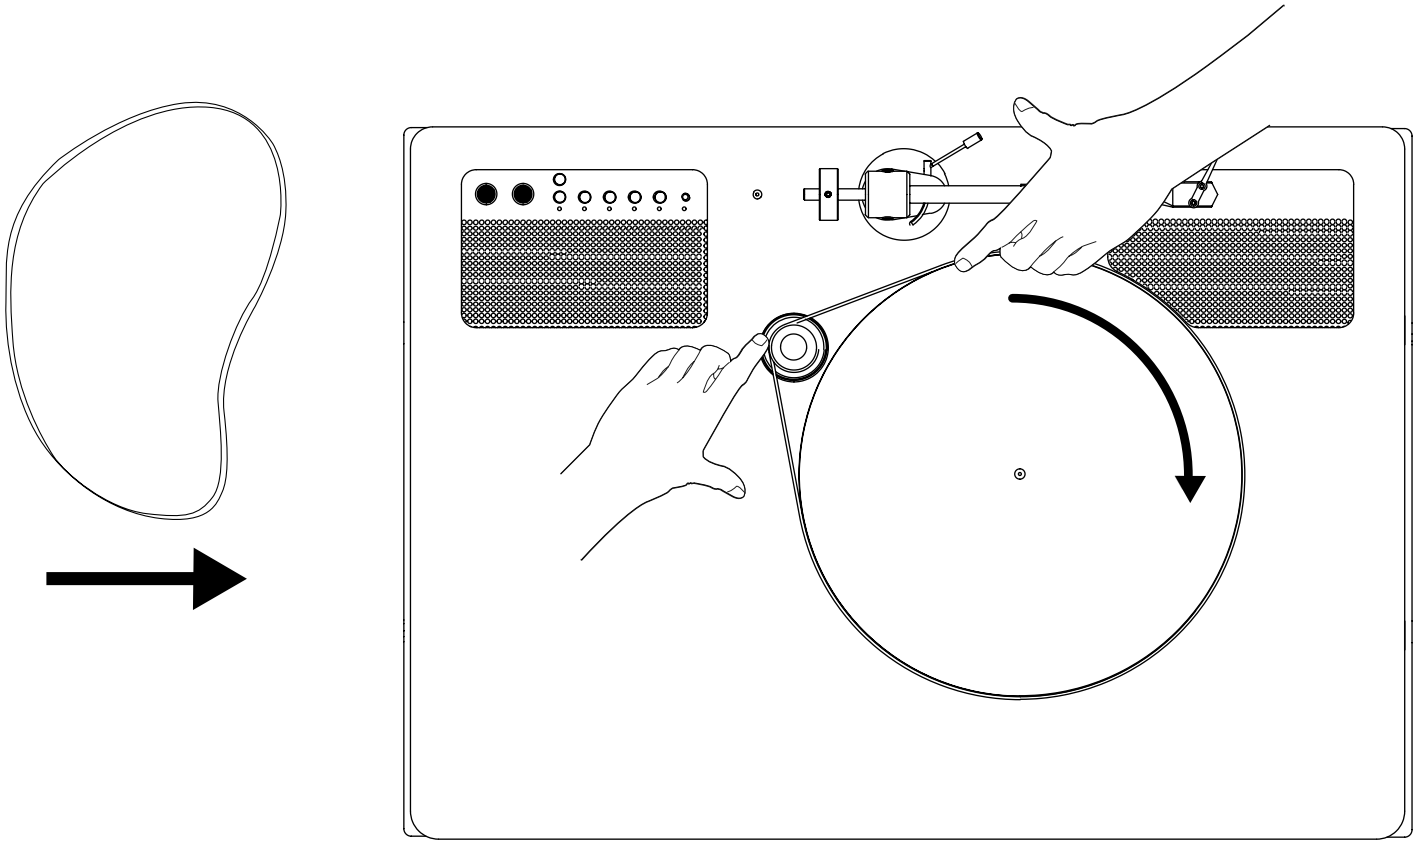


10. Setting up the belt :


With the left hand, gently hold the belt in the slot of the pulley.

With the right hand, tension the belt from the pulley to the plate avoiding stretching.

Carefully wrap the belt around the plate avoiding folds.

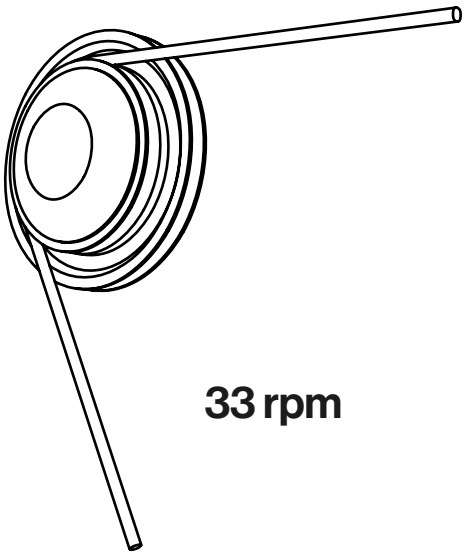

33 rpm

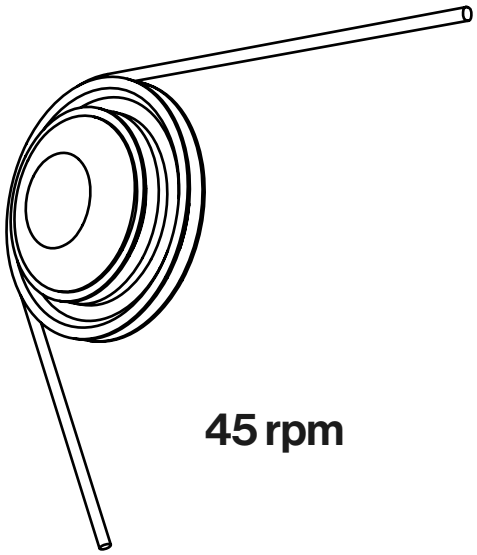

45 rpm

10. Changing the turntable speed :

The placement of the belt on the various grooves of the pulley allows to change the speed of rotation of the vinyl disc.


6-Quickstart

1 - Ideal positionning of the LX Turntable in your room

Traditional acoustic speakers have a restricted ideal listening field in both longitudinal and lati- tude planes. Thanks to its filtering and the pattern of its acoustic blaffles, as well as the position- ning of its rear loudspeaker, the LX offers optimal listening wherever you are seated or moving. Thus, the LX has been designed for both high fidelity listening at low levels, as well as for a group experience during a party at high levels.

Filling your room with sound

The spatialization of the “Wide Stereo Sound 3.0®” (patented by La Boite concept) is the result of research aimed to obtain stereophonic sound renderings and homogeneous quality under all circumstances, whether the listener is alone or in a group, seated or standing, close to the speaker or further away. Besides enhancing the greatest listener mobility with respect to the LX, these researches has con- tributed to preserving the sound of the device, regardless of its location inside the listening room, thus reducing installation constraints for the user. The LX side baffles help to enlarge the stereophonic listening from one of the furniture’s sides, by reducing the nearby effects from one channel to the other.
As a result, the listener does not have to stand in the central position in order to obtain an en- joyable rendering of the stereophonic image (which also allows the possibility of several listeners simultaneous enjoying a stereophonic sound broadcast). Furthermore, the user no longer needs to place the LX perfectly symmetrical according to the walls of the room.

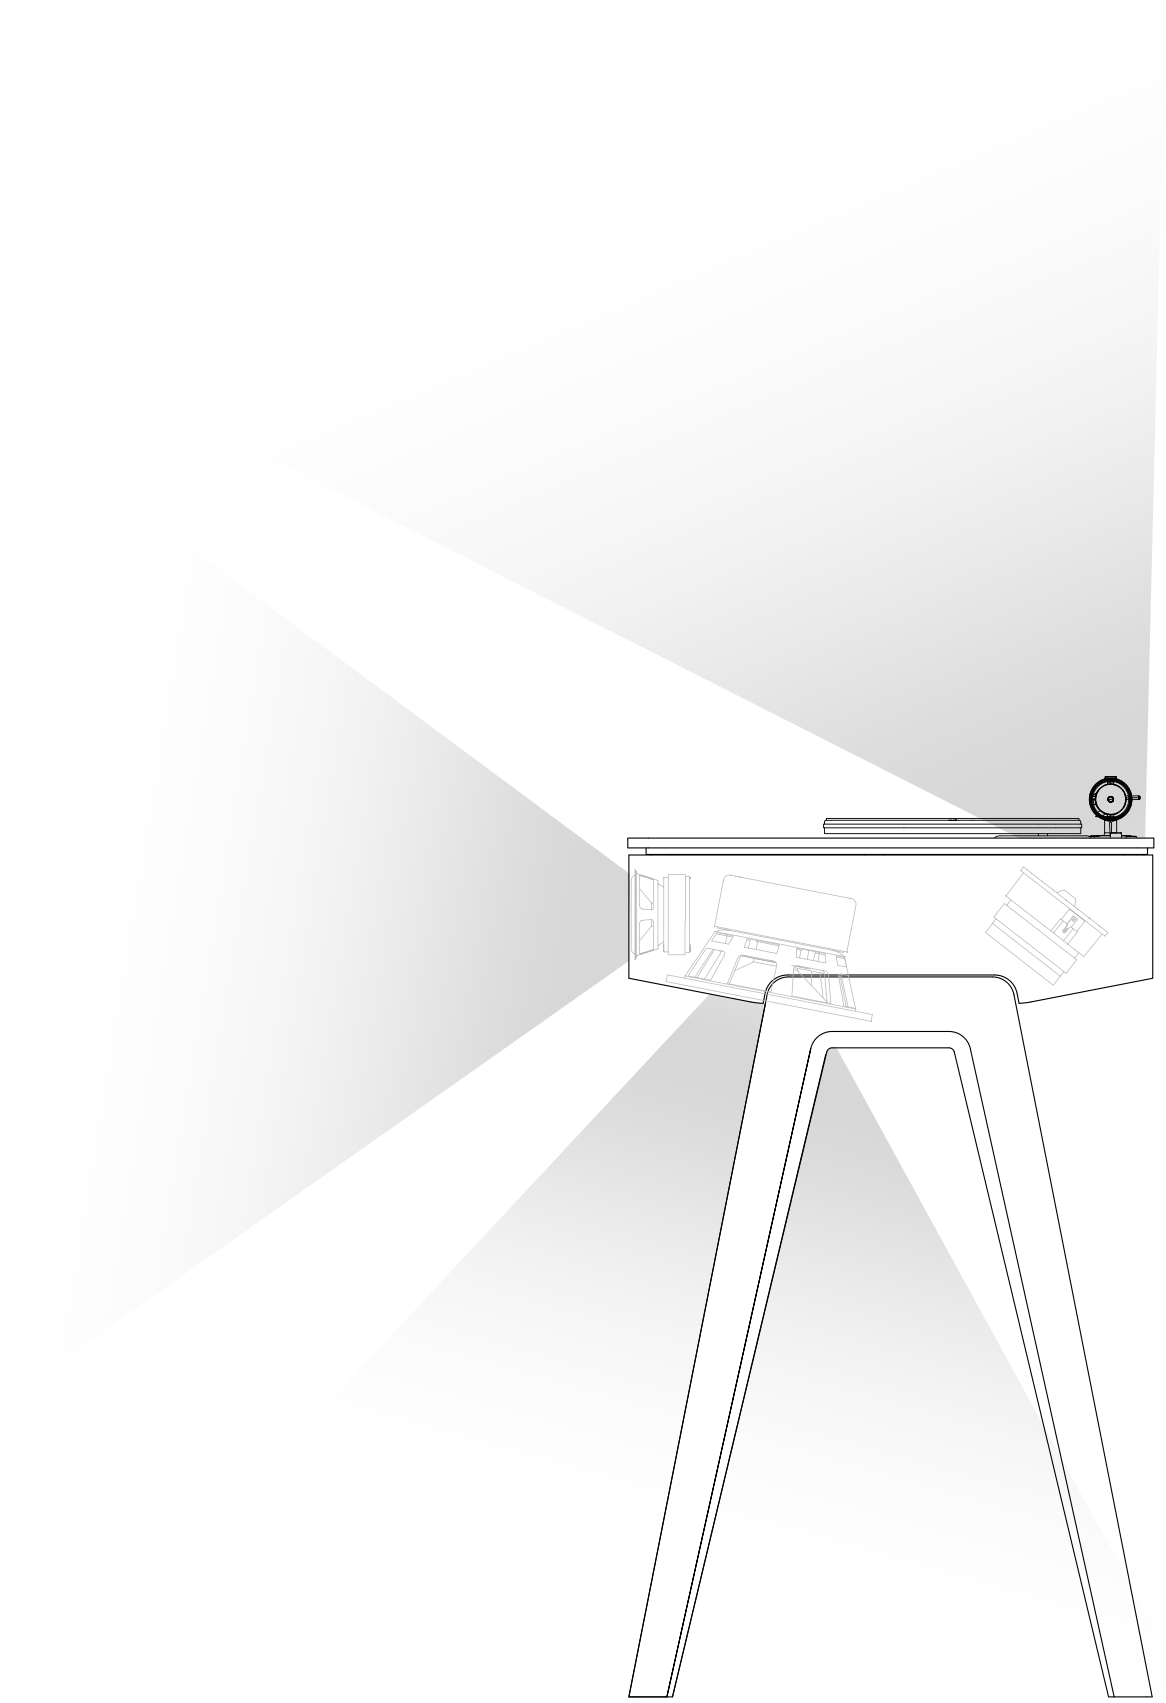


Spatialization of the sound of the LX Turntable

2 - Turning the power ON/OFF

1. Insert the power cord into the power cable plug located under your LX Turntable (refer to page 21)


2. Place the power cord into the groove on the stands provided for this purpose.

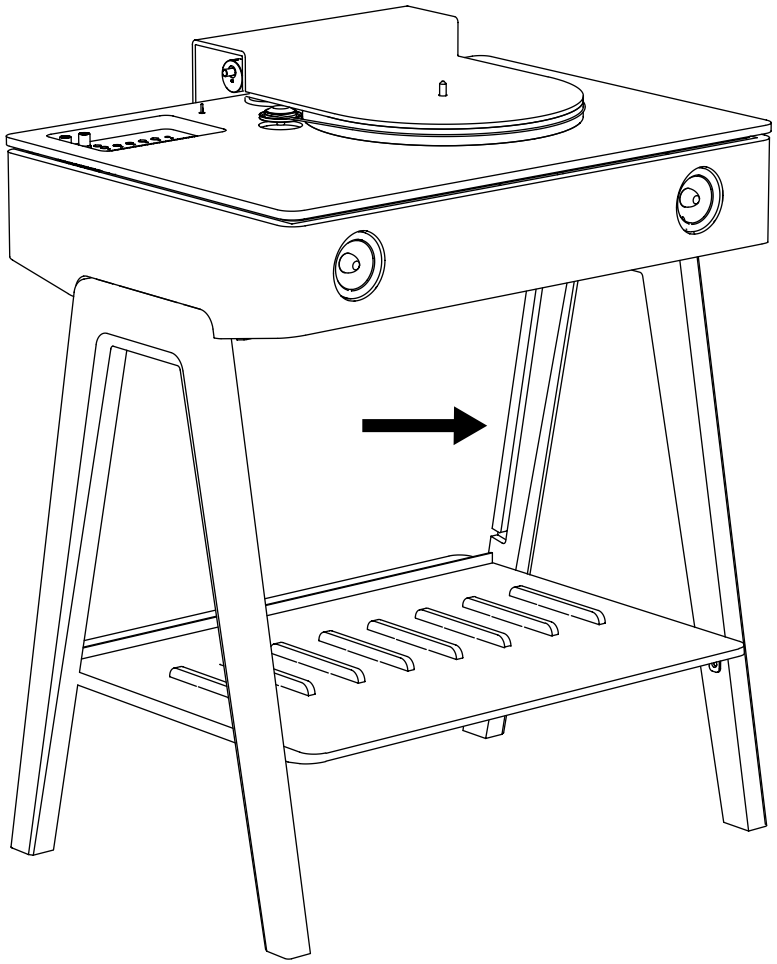

3. Connect the power cord to the wall socket.


4 . First, turn on the LX Turntable by switching the master ON/OFF at the back of the loudspeaker. (refer to page 21).

5. Then, turn the volume control knob clockwise to switch on the LX Turntable. The Bluetooth LED lights up.

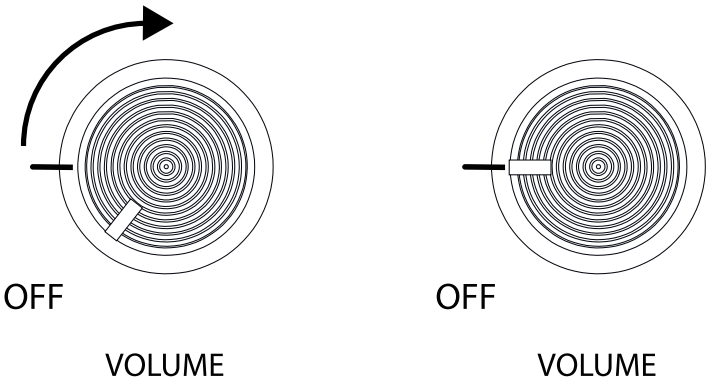

6. The LX Turntable will automatically go into standby mode if you leave your device without signal for 30 minutes. The standby LED light will turn red. To wake up the device, press the control knob or play music from either sources.

7. To temporarily put the LX Turntable into “off” mode and avoid power consumption, turn the volume control knob counter clockwise to the “OFF” point until you hear a “click” sound.

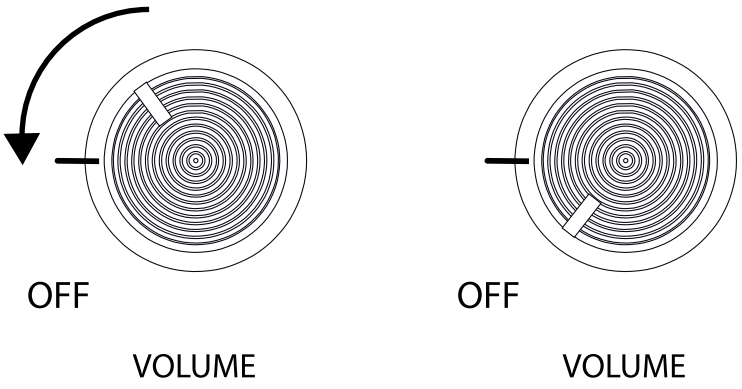


8. To fully switch the LX Turntable off, switch the master ON/OFF at the back of the loudspeaker (please refer to the drawing on page 61). All the LED lights are now off and the USB power discon- nects.

3 - Choosing your source

Once you have set up to use by pressing the your connections on the input panel, you can select the source you want corresponding button on the control panel (from 1 to 7).


- Selecting the source **BT** corresponds to (1) the Bluetooth® connection with your devices.
- Selecting the source **PAIR** corresponds to (2) the Bluetooth® pairing with your devices.
- Selecting the source **AUX** corresponds to (3) the AUX input
- Selecting the source **RCA/PHONO** corresponds to (4) the Phono or RCA inputs provided to connect your vinyl turntable.

This source is linked to the RCA/Phono button located on the input panel.

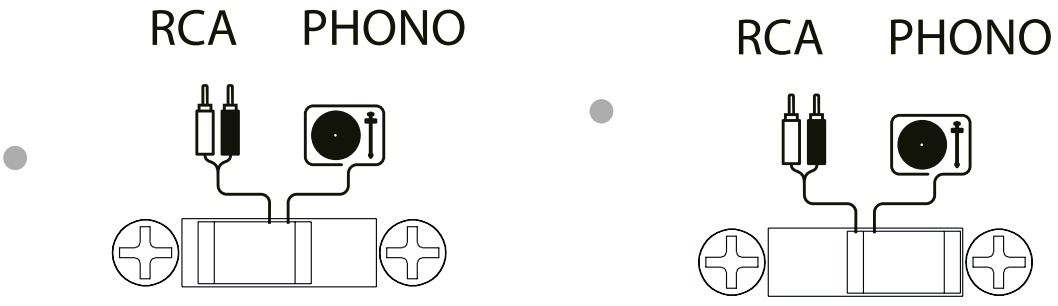

- Selecting the source **OPTICAL** corresponds to (5) the input for the Optical cable.
- Selecting the source **USB DAC** corresponds to (6) the input for the USB DAC cable.
- Selecting the source **HEADPHONES** corresponds to (7) the headphone / earphone output.

Note : The used source is indicated by the LED light (8)

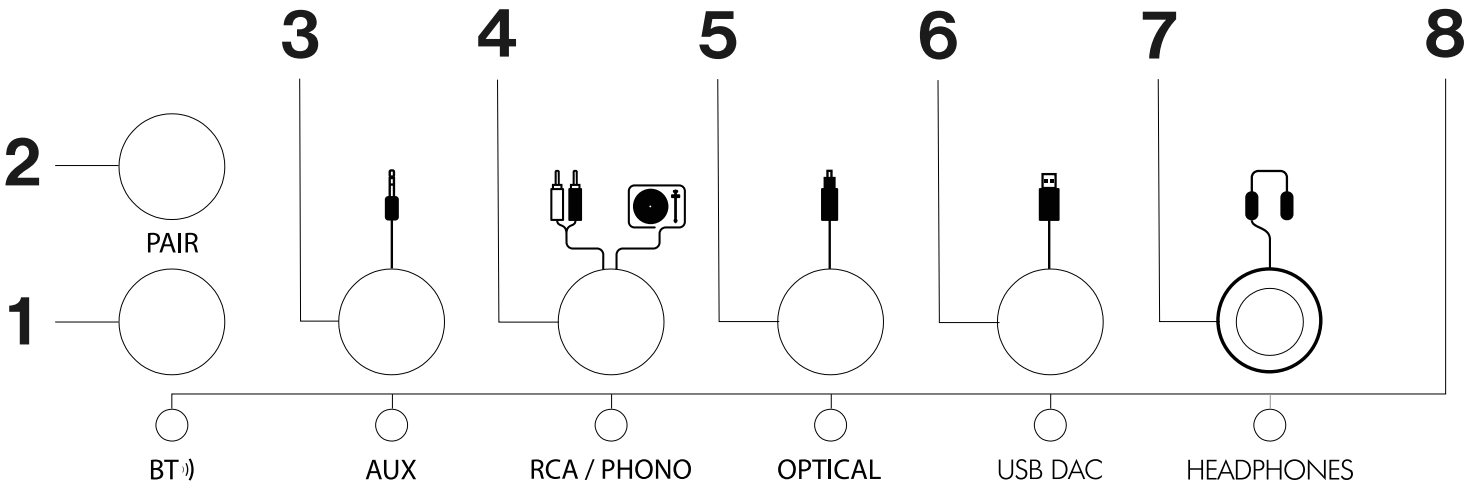

4 - Volume and bass settings

Volume settings


To increase the volume
Turn the volume control knob clockwise.

To decrease the volume
Turn the volume control knob counter clockwise.

Bass settings


Turn the knob towards the – to decrease the bass and towards the + to increase the bass.

Settings to twelve o'clock = 0 : neutral position.

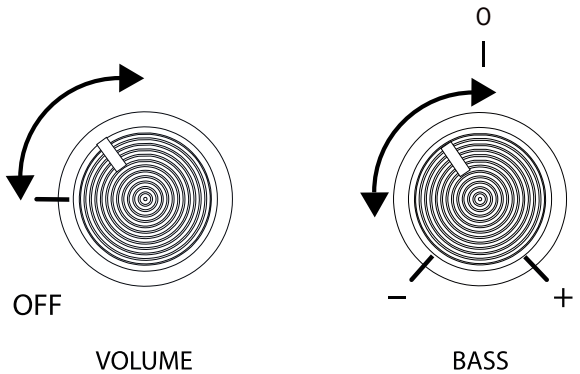

5 - Turntable use


- Swap to PHONO source by switching the button on the input panel. You are now in “Turntable mode”

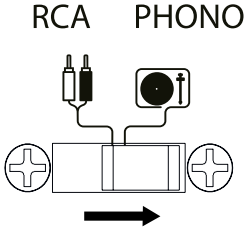

- Click on the RCA/Phono button on the control panel (refer to page 18)
- Switch on the loudspeaker. (refer to page 35)
- Refer **1** : Place the disc on the felt, and make sure it is properly cleaned and dusted.
- Refer **2** : Select speed according to the chosen disc(33 or 45 rpm).
- Remove the protection of the cartridge.
- Refer **3** : Press the ON/OFF button on the disc motor.
- Refer **4** : Take out the tonearm from its support, and gently position it on the disc.
- Start playing.


At the end of the disc :

- Switch off the turntable motor by pressing the Start/Stop button.
- Pick up the arm and gently replace it on its support.

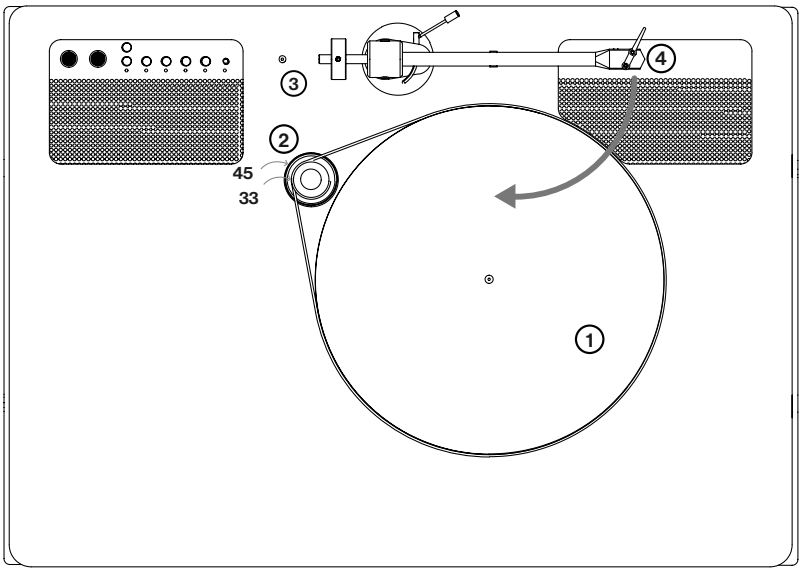

6 - Orientation of the cartridge

If the cartridge is changed, or if the turntable is moved, it may be necessary to readjust the cartridge orientation. The cartridge head is fitted with two screws that enable the angle of the cartridge to be adjusted according to the type of vinyl involved (33 rpm or 45 rpm). Adjustment templates are available from specialist manufacturers.

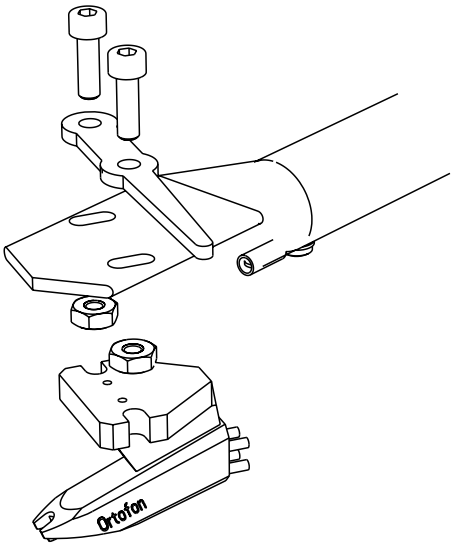

7 - Using your LX with your devices

1 - Bluetooth® connection

Your LX is equipped with Wireless Bluetooth®. This technology allows you to send your music wire- lessly from your computer, tablet or smart-phone to your La Boite concept speaker. The Bluetooth® receiver allows you to listen high definition music wirelessly. To use this connection, you have to :

To use this connection, you need to :

1. Turn the LX on.
2. The Bluetooth® is the default source and will automatically turn ON. The LED light on the LX will start to flash in white.
3. Activate the Bluetooth® functionality on your device (tablet or smartphone).
4. Press rapidly the button PAIR on your LX, the LED light flashes rapidly.
5. On your device, select the LX in the list.
6. The LED light will turn to a steady white, you are now connected.
7. You can now control your playlists from your source (computer, tablet or smart-phone) in a radius of about 10 meters around your LX.


Notes :

You only need to pair your computer, tablet or smart-phone w the LX once, after which the de- vice will be included in the list of your Bluetooth® devices. When pairing a new device, press the pair button again, and repeat steps above. Your LX is able to store up to six devices in its memory.


The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth® SIG, Inc. Other trademarks and trade names are those of their respective owners.

2 - USB plug

This plug allows connecting a computer. This function allows you to use the sound card integrated in the device without using and regardless of the quality of the card integrated in your computer. Only this plug allows reading music via computer. This system was developed for an effective operation without parameter setting. However, in some situations (music software already opened, for example), this USB input can be used with a simple manipulation. In this case, for the

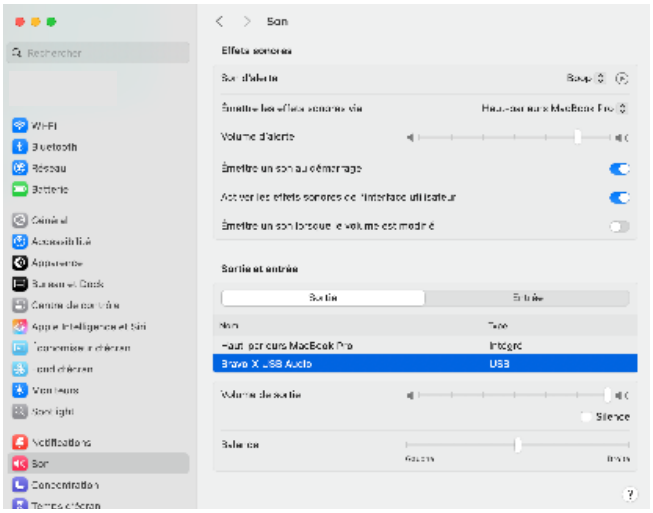

On Mac

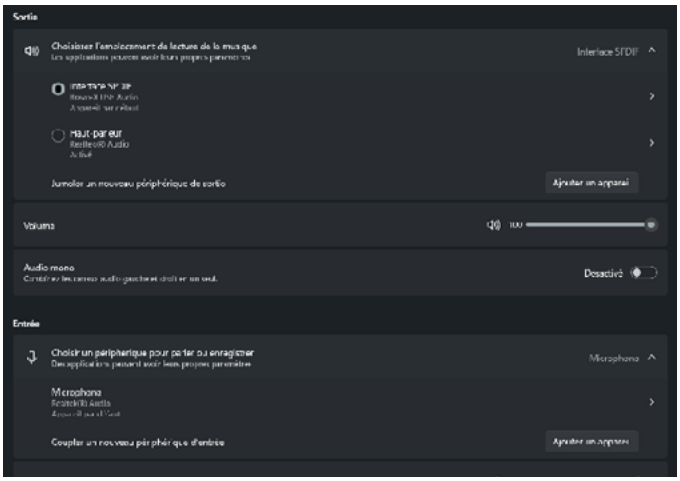

On Windows

3 - Charging through the IEC power socket

The LX Turntable is equipped with an integrated IEC power socket located in the trap door, on the right hand. Thanks to the C14 IEC universal adaptor provided, you will be able to plug in and charge all your devices even when the LX Turntable is asleep. However, if you turn off the LX Turntable using the master ON / OFF, there will no longer be power running through the IEC plug. (refer page 21).

4 - USB charger

The LX Turntable comes with a built-in-2-port USB charger. The ports will power your USB devices even if the speaker is in standby mode. Powering off the LX Turntable with the rear main switch will also power off the USB ports.

The charger works with most USB compliant devices at 5V and can provide up to 2.4A for USB-A-charging current (for fast iPad charging).

Note : Never use the charger with damaged cables as they could overheat and cause a fire. USB-A charging current s limited to 15W. This is enough to charge most phones and tablets. The charger is not compatible with the old iPod Classic (pre 2010)and other rare devices not fully compatible with the USB standard.

5 - Cable connection

Optical Audio Digital Input (cf p. 18).


Use the optical input to connect your LX Turntable to your TV, hard disk player, streaming player and satel- lite or cable receiver. The optical input only works with PCM stereo, if a connected device sends 5.1 audio (or similar surround sound), the LX Turntable will not work. We recommend that you use the opti- cal input for the videos as this cable avoid the latency between image and sound.

To use this connection, you just have to :

1. Connect the optical audio cable to the optical audio input on your source.
2. Turn the LX Turntable on.
3. Select Optical source by pushing the control knob.

RCA analogue input (refer page 19).
Use the RCA input for connecting your LX Turntable to audio sources such as your mobile phone, music player or tablet.

To use this connection, you need to :
1. Connect the audio cable provided to your LX Turntable and to the audio output of your music device (source).
2. Swap to RCA source by switching the button on the input panel.

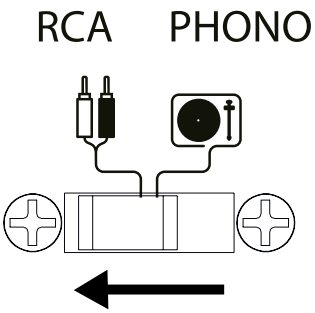


3. Select RCA/Phono as source by pushing the Control knob until RCA/ Phono LED is illuminated.

Auxiliary : 3,5mm stereo plug (refer page 19).
Use the 3.5mm jack input to connect your LX Turntable to audio sources such as your CD player or turntable (pre-amplified).

To use this connection, you need to :
1. Connect the audio cable to your LX Turntable and the audio output of your music device (source).
2. Select AUX as source by pushing the Control knob until the AUX LED is illuminated.

6 - Wi-Fi multi-room connection ESCAPE streamer x LA BOITE CONCEPT

1. Connection via 3.5mm auxiliary jack

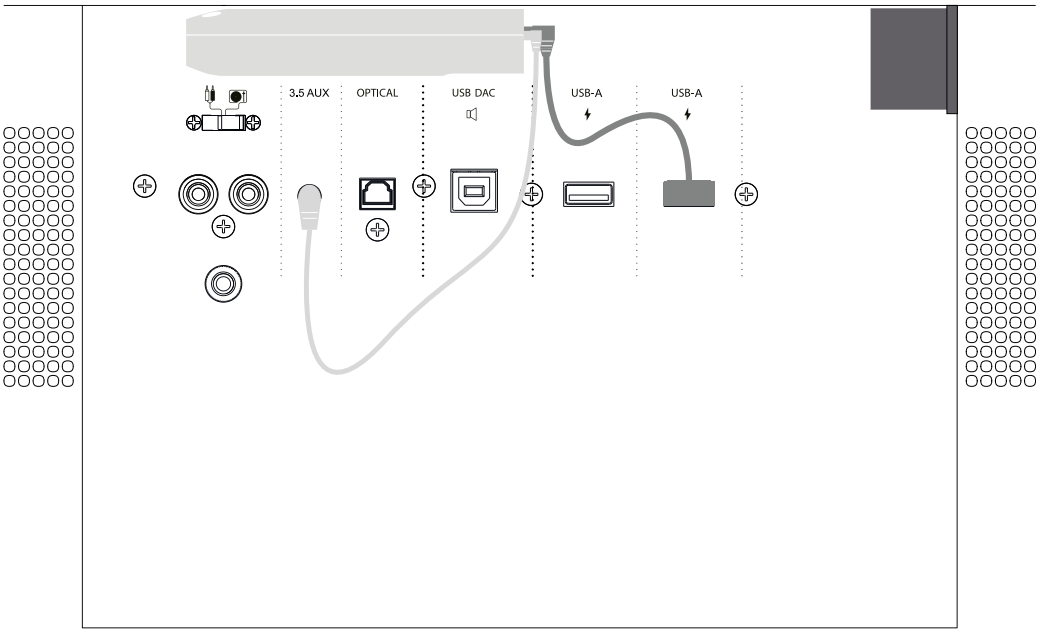


1. Plug the streamer into the USB-A port located on the source panel of the LX Turntable.
2. Connect the streamer to the 3.5mm AUX jack input.
3. The streamer is now powered; a red indicator light will start blinking. It is ready to be configured.

Make sure your phone or tablet is connected to the same Wi-Fi network you want to use:

- Android: Open the Google Home app and tap the “+” symbol at the top left of the home screen.
- iOS: Go to the Wi-Fi settings on your iPhone or iPad and select “Escape M1 XXX” under “Set Up New AirPlay Speaker.”

Note: Refer to the Escape streamer manual for more details on how it works.

2. Optical connection

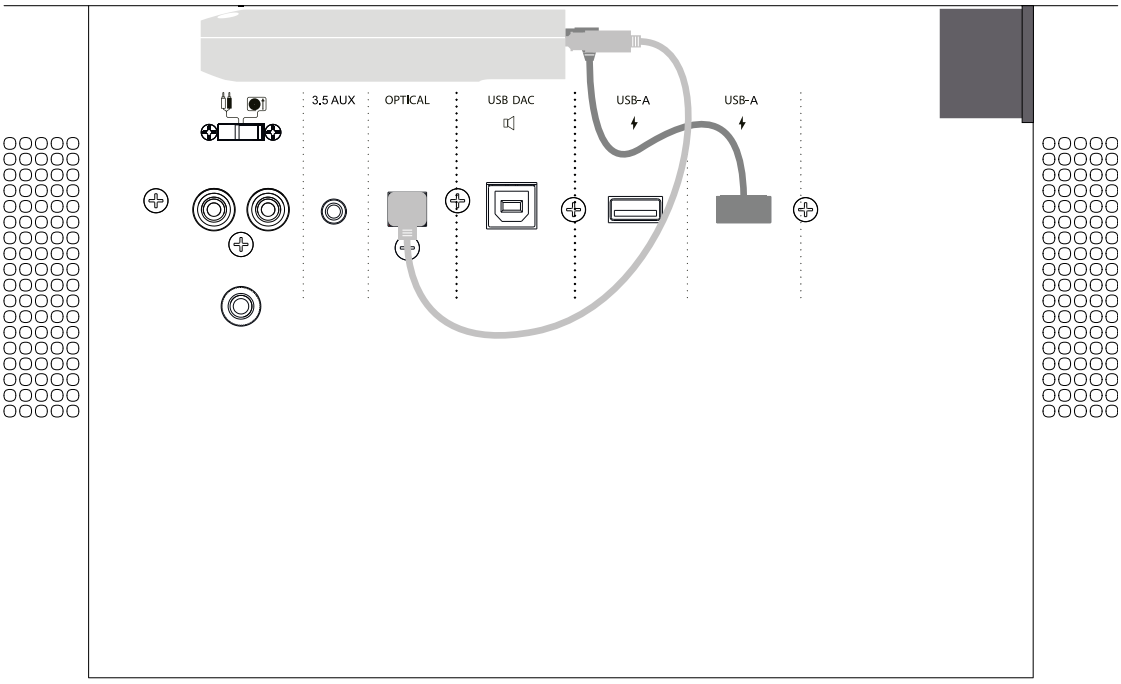

1. Plug the streamer into the USB-A port located on the source panel of the LX X Turntable.
2. Connect the streamer to the optical input.
3. The streamer is now powered; a red indicator light will start blinking. It is ready to be configured.

Make sure your phone or tablet is connected to the same Wi-Fi network you intend to use:

- Android: Open the Google Home app and tap the “+” symbol in the top left corner of the home screen.
- iOS: Go to the Wi-Fi settings on your iPhone or iPad and select “Escape M1 XXX” under “Set Up New AirPlay Speaker.”

Note : Follow the Escape streamer manual for further guidance on setup and functionality.

8-What to do ?

1 - To clean your LX Turntable

Before cleaning the device, unplug your LX from the power socket. Clean the device only with a dry cloth. Do not use cleaning alcohol or solvents to clean the device's surface because these could damage the painting and cause electrical failures or fire if they penetrate the device's electronics.

2 - No power

Make sure that the AC cable is solidly connected. Make sure that the plug is fully inserted in the power socket and there is power. Check that the master ON / OFF located underneath the loudspeaker (please refer to page 21) is positioned on "ON". Make sure that the LX Turntable is not in standby mode. Make sure that the device is switched on by checking the Bluetooth® white LED on the top panel. (refer to page 18)

3 - No sound

Make sure that the volume is turned up to audible level and that the input source is at its maximum. Make sure that an available input source is selected (cf p. Using your LX with your devices) Make sure that the LX is not in standby mode. Check if the bluetooth connection with your device is still active. Finally, if you still cannot hear any sound coming out of the LX Turntable, increase the volume (refer page18).

4 - The sound is distorted or buzzes

Check the connections of your music readers. Make sure that all the connecting cables are correctly plugged in, especially the earth/protection shield connections. Make sure that your cables are in good condition.

5 - Background noise and undesirable interferences

Separate the device from other electrical appliances which may be causing the interference. If the above solutions do not remedy your problem, please contact a professional. Your home electrical installation may be connected to earth ground or it may be polluted by electrical parasites devices that implies audible noise. For any repairs during or after the warranty, please contact your dealer.

6 - Thermal protection of the power amplifier

In case of high level extended uses, a rising temperature can alter the performance of the amplifier. Above 110 degrees, the highest level allowed for safe optimal listening conditions must be lowered until the am- plifier cools down.

7 - Bluetooth® issues

When connecting a new device make sure the LX Turntable input source is switched to Bluetooth®. If the LX Turntable does not show up on your device make sure to manually refresh the Bluetooth® device list on your phone / device after rapidly pressing the LX Bluetooth button. There will be a short audio signal once your device makes connection. If you can't hear any sound make sure the LX Turntable is not in standby and turn up the volume.

You will hear a short beep once your device connects. If you don't hear any sound, make sure the LX Platinum is not in standby mode, and turn up the volume. Your device may lose the connection if you leave the Bluetooth® page or put it to sleep. In this case, the Bluetooth® connection can be easily reestablished from your cell phone's Bluetooth® configuration page (without having to press the LX Platine's Bluetooth® button). Please note that, depending on your installation and the model of your cell phone, the Bluetooth® range will be limited to 5-10 meters, or even less if walls or furniture obstruct the signal.

9-Technical summary

Sources

Bluetooth® AptX
AUX : stereo jack 3.5 mm
Phono input with ground
RCA input
Optical : optical digital audio input DAC Wolfsond 24 bits
USB

USB charger

2 X USB-A (permanent connection, charging up to 2,4 A)

Dimensions & weight


H : 79cm, L : 69cm,
D : 48cm
Poids : 30 kg


Loudpseakers

1 x Bass reflex woofer with cellulose pulp cone
2 x tweeters TWZ WS 3.0 with cones and bullet equipped with internal convex deflectors
2 x Fiberglass mid-range drivers with aluminium cones.
Class D 5 channels 4.1 amplifier

Turntable

Pro-ject® Turntable
Compatible with cartridges MM/MC
Signal to noise-radio : > 82dB MM / > 78dB MC

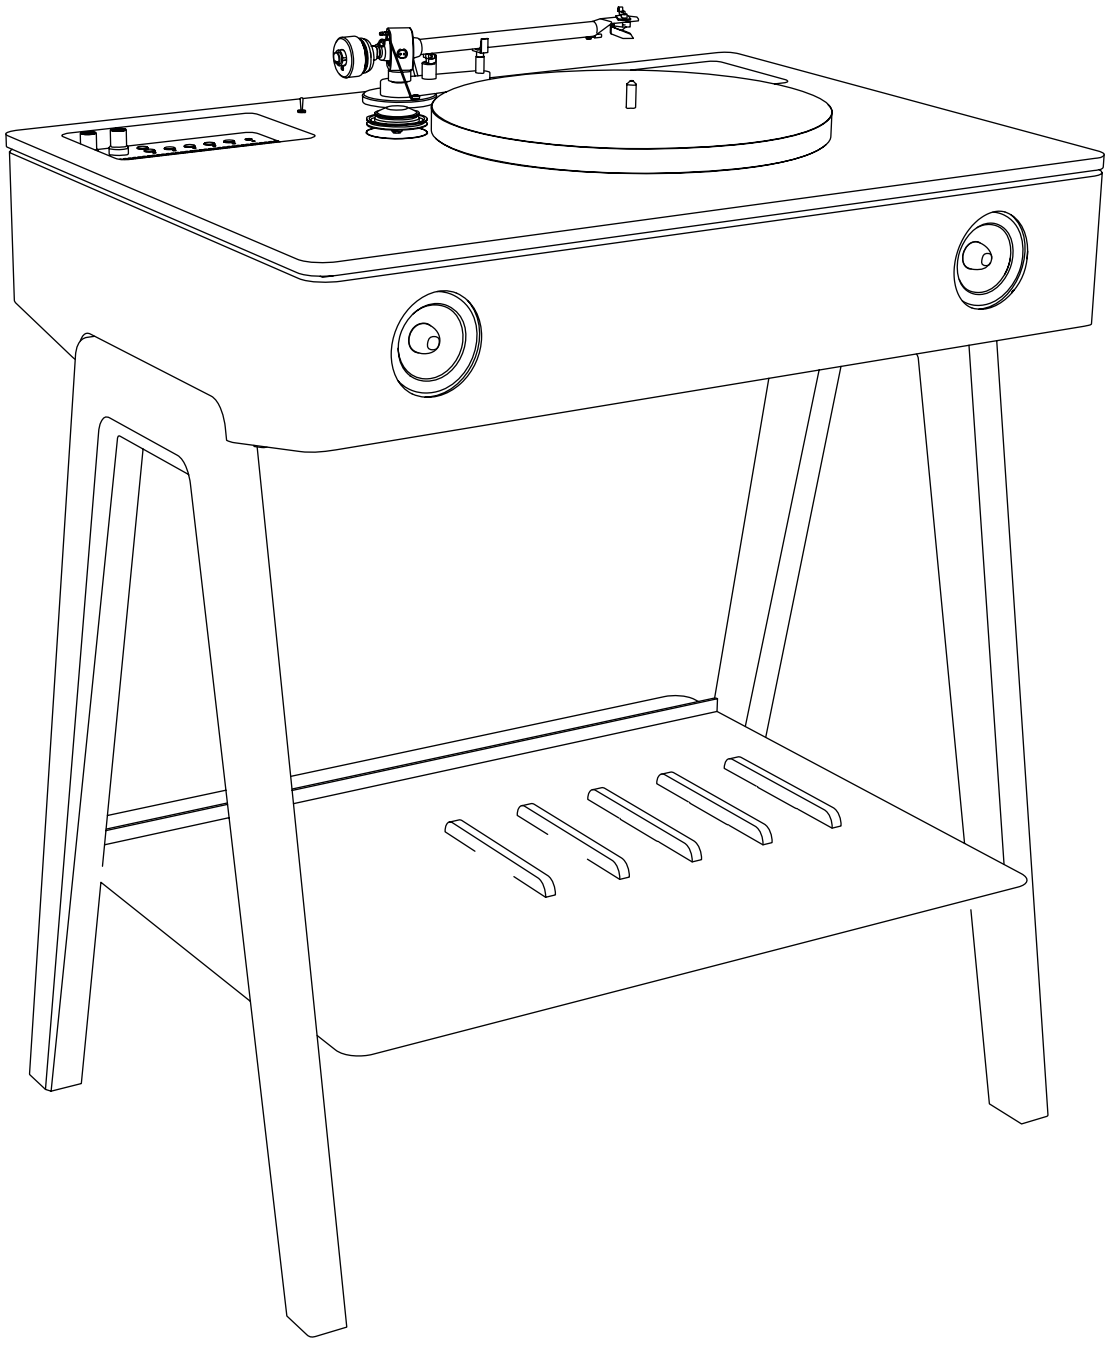

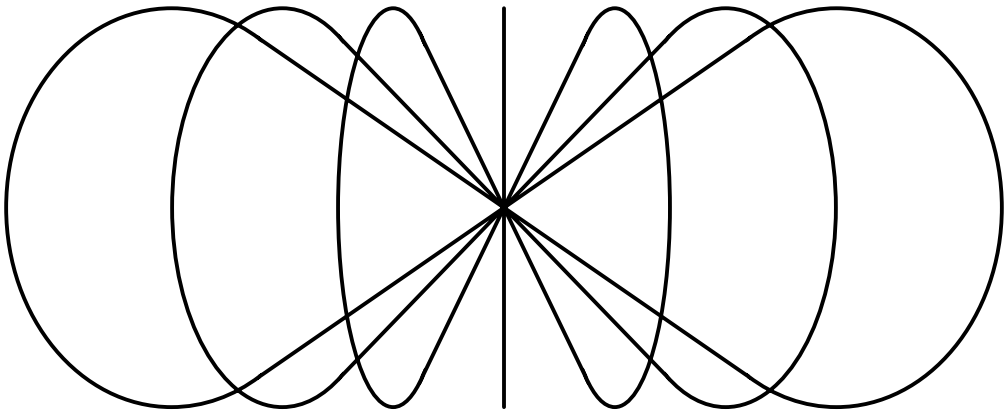

www.laboiteconcept.com info@laboiteconcept.com